

Operating Manual
PrimaX
Gas Transmitter



MSA AUER GmbH
Thiemannstrasse 1
D-12059 Berlin

Germany

© MSA AUER GmbH. All rights reserved



Declaration of Conformity

The manufacturer or his in the community established authorized representative

MSA AUER GmbH
Thiemannstraße 1
D-12059 Berlin

declares that the product

PrimaX I, PrimaX P

based on the EC-Type Examination Certificate: **BVS 10 ATEX E009 X**

complies with the ATEX directive 94/9/EC, Annex III. Quality Assurance Notification complying with Annex IV of the ATEX Directive 94/9/EC has been issued by DEKRA EXAM in Bochum, Notified Body number: 0158.

Standards: EN 60079-0:2009, EN 60079-1:2007, EN 60079-11:2007,
EN 60079-26:2007, EC 60079-31:2009, EN 61241-11:2006
EN 60079-29-1:2007, EN 50104:2010, EN 50271:2010

The product is in conformance with the directive 2004/108/EC, (EMC):

EN 50270:2006 Type 2, EN 61000 - 6 - 3:2007

A handwritten signature in black ink, appearing to read 'Dr. A. Schubert'.

MSA AUER GmbH

Dr. Axel Schubert

Manager R&D Instruments

& Approvals INT-T

Berlin, January 2014

Contents

1	Safety Regulations	6
1.1	Correct Use	6
1.2	Liability Information	6
1.3	Safety and Precautionary Measures to be Adopted	7
1.4	MSA Permanent Instrument Warranty	9
2	Description	10
2.1	Identifying the Unit	10
2.2	Overview	10
3	Installation	12
3.1	Mechanical Installation	13
3.2	Electrical Installation	15
4	Operation	18
4.1	Startup	19
4.2	Menu Sequence	20
4.3	Calibration	21
4.4	Maintenance and Info	24
4.5	Password	28
4.6	Changeable Parameters	28
4.7	Optional HART Module and Relay	29
5	Maintenance	35
5.1	Changing the Sensors	35
6	Technical Data	37
6.1	Specifications	37
6.2	Cable Lengths and Cross-sections	38
6.3	Performance Specifications	39
6.4	List of Detectable Gases	39

6.5	Sensor Response to Interferants	42
6.6	PrimaX P List of Combustible Gases and Vapours detectable with Catalytic Sensor Part No. 10112716	44
7	Approvals	48
7.1	Marking, Certificates and Approvals According to the Directive 94/9/EC (ATEX)	48
7.2	Marking and Certificates according to IECEx	52
7.3	Special conditions for the safe use according to ATEX and SIL applications	55
7.4	Safety Relevant Parameters	58
8	Accessories	60
8.1	Calibration Cap	60
8.2	Sensor Gard	60
8.3	Remote Calibration	61
8.4	Flow Through Adapter	63
8.5	Duct Mounting Kit	64
8.6	Pipe Mounting Kit	65
8.7	Sensor Tag	66
8.8	Sunshield	67
8.9	Universal HART Cable	67
9	Spare Parts	68
10	Appendix	70
10.1	Output States	70
10.2	Calibration Faults	71
10.3	Error Codes	72
10.4	Timeout	72
10.5	Mechanical Installation	73
10.6	Wiring Diagrams	76

1 Safety Regulations

1.1 Correct Use

The PrimaX Gas Transmitters are fixed gas transmitters for measuring toxic or combustible gases and for monitoring oxygen deficiency, excess or inerting. They are suitable for outdoor and indoor applications without limitations, e.g. offshore industry, chemical and petrochemical industry, water and sewage industry. The signal of the transmitter can be used in combination with MSA control units for further actions in safety or non safety applications, e. g. MSA SUPREMA, Gasgard XL, 9010/9020.

The two versions of the gas transmitter are delivered either in a flameproof or in an intrinsically safe enclosure. The electrical parts and interfaces have the same basic functionality.

It is imperative that this operating manual be read and observed when using the product. In particular, the safety instructions, as well as the information for the use and operation of the product, must be carefully read and observed. Furthermore, the national regulations applicable in the user's country must be taken into account for a safe use.



Danger!

This product is supporting life and health. Inappropriate use, maintenance or servicing may affect the function of the device and thereby seriously compromise the user's life.

Before use the product operability must be verified. The product must not be used if the function test is unsuccessful, it is damaged, a competent servicing/maintenance has not been made, genuine MSA spare parts have not been used.

Alternative use, or use outside this specification will be considered as non-compliance. This also applies especially to unauthorised alterations to the product and to commissioning work that has not been carried out by MSA or authorised persons.

1.2 Liability Information

MSA accepts no liability in cases where the product has been used inappropriately or not as intended. The selection and use of the product are the exclusive responsibility of the individual operator.

Product liability claims, warranties also as guarantees made by MSA with respect to the product are voided, if it is not used, serviced or maintained in accordance with the instructions in this manual.

1.3 Safety and Precautionary Measures to be Adopted

**Attention!**

The following safety instructions must be observed implicitly. Only in this way can the safety and health of the individual operators, and the correct functioning of the instrument, be guaranteed.

- The device described in this manual must be installed, operated and maintained in strict accordance with their labels, cautions, instructions, and within the limitations stated.
- The device is designed to detect gases or vapours in air.
- If a device with a combustible sensor is exposed to vibrations, calibration shall be done in sufficient short intervals until it is verified that the device is not affected by the vibration stress.
- Do not mount the sensing head in direct sunlight as this could cause overheating of the sensor.
- The device must be installed with the sensor inlet pointing downwards to avoid clogging of the gas inlet by particles or liquids.
- Electrochemical sensors are sealed units which contain a corrosive electrolyte. Should a sensor develop leakage, it must be immediately removed from service and disposed of properly. Caution must be exercised so that the electrolyte does not contact skin, clothing or circuitry otherwise personal injury [burns] and/or equipment damage may result.
- The only absolute method to ensure proper overall operation of the device is to check it with a known concentration of the gas for which it has been calibrated. Consequently, calibration checks must be included as part of the routine inspection of the system.
- As with all devices of these types, high levels of, or long exposure to, certain compounds in the tested atmosphere could contaminate the sensor. In atmospheres where the device may be exposed to such materials, calibration must be performed frequently to ensure that the operation is dependable and display indications are accurate.
- The device must not be painted. If painting is done in an area where a device is located, care must be exercised to ensure that paint is not deposited on the sintered metal flashback arrestor in the gas sensor inlet, if so equipped. Such paint deposits would interfere with the gas diffusion process.
- Use only genuine MSA replacement parts when performing any maintenance procedures provided in this manual. Failure to do so may seriously impair instrument performance. Repair or alteration of the device, beyond the scope of these

maintenance instructions or by anyone other than an authorised MSA service personnel, could cause the product to fail to perform as designed.

- The device is designed for applications in hazardous areas under atmospheric conditions.
- For correct measurements, the combustible gas sensors require an oxygen concentration greater than 10 Vol%. Oxygen enriched atmospheres, greater than 21 Vol%, can affect the measurement and the electrical safety of the device.
- The response time of the device will be increased by significant dust deposits on the Sensor. Checks for dust deposits must be done at regular intervals.
- Catalytic combustible gas sensors may produce low or zero response to combustible gas after exposure to substances as Silicon, Silane, Silicate, Halide and compounds containing Fluorine, Chlorine, Iodine or Bromine.
- Catalytic sensor: After exposure of gas above the measuring range, the sensor has to be immediately calibrated / adjusted, independent of the calibration interval. In the case of an adjustment the sensitivity of the sensor has to be re-checked again after 24 hours.
- In case of very high flammable concentrations >100%LEL the device is able to lock all outputs [LOC]. This function shall be used for standalone applications according to ATEX requirements.
- Catalytic sensor: If the PrimaX is operated in combination with a control unit and [LOC] is deactivated on the PrimaX, the control unit has to ensure the latching after the measuring range was exceeded.
- Catalytic sensor: Before a reset of an over range [LOC] indication is done it shall be verified that the gas concentration is below full scale.
- Toxic gases: If the measuring range is exceeded, sensor life time can be reduced or the sensor might need a recovery phase.
- Used sensors have to be disposed of in an environmentally compatible way.
- At signal underrange between -1.25 % and -10 % of the measuring range the 4 - 20 mA output is set to 3,8 mA. At signal underrange of more than -10 % of the measuring range the 4 - 20 mA output is set to the error state (2 mA). To

avoid a delayed alarm activation, a calibration should be done when the output current is set to 3,8 mA and "LO" is shown on the display persistently.

- The lowest range which is suitable for the alarm thresholds should be selected for toxic gases.
- To compensate for possible deviations during measurement of flammable gases a calibration factor of 1.05 has to be applied when using the CalGard for remote calibration (see chapter 8.3)

1.4 MSA Permanent Instrument Warranty

Warranty

Seller warrants that this product will be free from mechanical defect or faulty workmanship for

- Gas Transmitter: eighteen [18] months from date of shipment or one [1] year from installation, whichever occurs first;
- Oxygen, Toxic or Catalytic Combustible Sensor: eighteen [18] months from date of shipping or one [1] year from installation, whichever occurs first.

This warranty is applicable provided the product is maintained and used in accordance with Seller's instructions and/or recommendations. This warranty does not apply to expendable or consumable parts, whose normal life expectancy is less than one [1] year.

The Seller shall be released from all obligations under this warranty in the event repairs or modifications are made by persons other than its own or authorized service personnel or if the warranty claim results from physical abuse or misuse of the product. No agent, employee or representative of the Seller has any authority to bind the Seller to any affirmation, representation or warranty concerning the goods sold under this contract. Seller makes no warranty concerning components or accessories not manufactured by the Seller, but will pass onto the Purchaser all warranties of manufacturers of such components.

2 Description

2.1 Identifying the Unit



Fig. 1 PrimaX Gas Transmitter

PrimaX P

The PrimaX P is a gas transmitter with an aluminium enclosure. This is a flameproof version for the detection of combustible or toxic gases or oxygen.

PrimaX I

The PrimaX I is a gas transmitter with a plastic enclosure. It is available as a general purpose version [not intended for hazardous area] or intrinsically safe version. Both versions are designed for a detection of toxic gases or oxygen.

2.2 Overview

The device is factory-calibrated and delivered ready for installation. Each device is configured and calibrated for only one specific gas or vapour.

The enclosures vary depending on the particular version. The electrical parts and interfaces have the same basic functionality.

The device has:

- a quick and easy pluggable sensor,
- a four digit liquid crystal display [LCD],
- a key pad with a cover
- a detachable backplate for installation on a wall or on a pipe

The device operate with a 4 – 20 mA output signal and an IP 67 ingress protection.

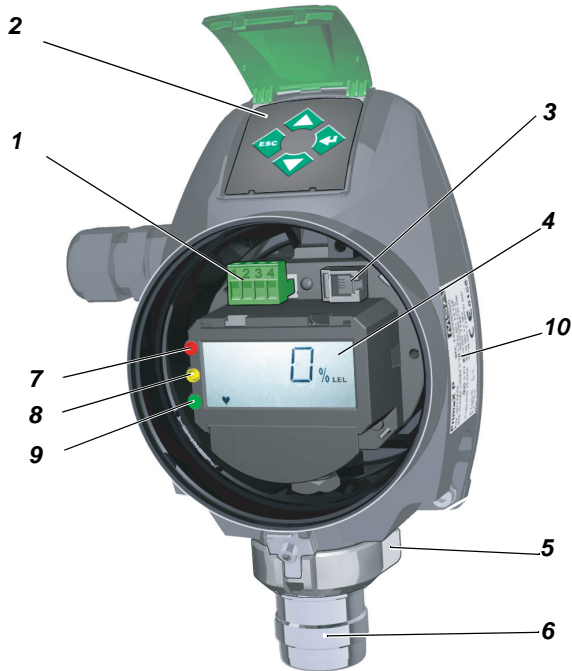


Fig. 2 Exploded View [PrimaX P]

- | | | | |
|---|-------------------------------|----|----------------------------|
| 1 | Terminal for power connection | 6 | Sensor |
| 2 | Keypad with cover | 7 | red LED [PrimaX P only] |
| 3 | Connector for factory use | 8 | yellow LED [PrimaX P only] |
| 4 | Display | 9 | green LED [PrimaX P only] |
| 5 | bayonet joint with interlock | 10 | Identification plate |

Sensors

Description	PrimaX P	PrimaX I
Detection of toxic gases	X	X
Detection of oxygen	X	X
Detection of combustible gases	X	

The device operates with a 4 – 20 mA output signal.

As an optional feature additional modules are available for these configurations of PrimaX transmitter:

Modules	PrimaX P	PrimaX I
HART module	X	X
HART + Relays module	X	-
HART+ Relays module with galvanically isolated analogue output	X	-

For more information on the HART module → chapter 4.7.

3 Installation

The device should be installed where gas leaks are expected. The installation position depends on the gas density, either in the upper area of the room under the ceiling for gases lighter than air or close to the ground for gases heavier than air. Also consider how air movement may affect the ability of the device to detect gas. The display on the front of the instrument must always be clearly visible, the view must not be obstructed.



Before beginning the installation, check that the delivered components are complete and correct, referring to the shipping documents and the sticker on the shipment carton.




When preparing the assembly, make sure that the mounting arrangement is correct for the particular device.

3.1 Mechanical Installation


Preparation

To install the device, first remove the backplate.

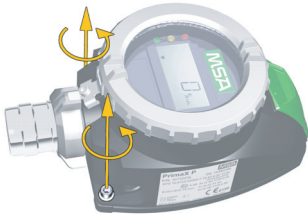

Undo Screws

- (1) Unscrew the device.

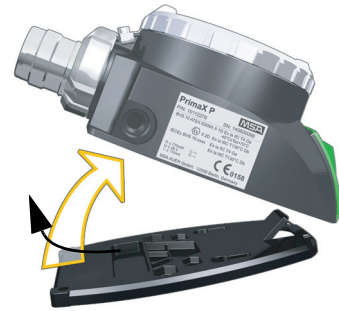

Remove Device

- (2) Remove the device from the backplate by lifting up the lower edge as shown.


Wall or Pipe Mounting

For pipe mounting a pipe mounting kit is necessary [→ chapter 8.6].



Install the Backplate

- (1) Use the two keyhole slots for attaching the mounting plate to the wall. Use 6mm diameter screws and suitable plugs.
- (2) For a wall installation use the backplate as a template for drilling the holes for the two fixing screws, for a pipe installation use the pipe clip.
- (3) Attach the backplate to the wall or the pipe clip with M6 x 20 screws.
 - The hitch should point away from the wall or pipe.
 - The straight edge of the backplate should be at the bottom.

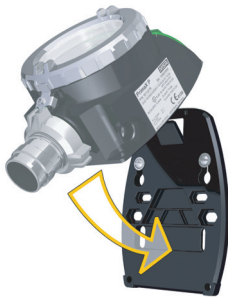

Attach the Device to the Backplate

- (4) Attach the device to the top of the backplate.
- (5) Fold down the device, till it is closed to the backplate.



Fasten Device

- (6) Screw the device to the backplate.

3.2 Electrical Installation

Instructions for Electrical Connection



Attention!

The device must be installed only in compliance with the applicable regulations, otherwise the safe operation of the instrument is not guaranteed.

- Shielded cable for measuring devices is recommended.
- Always observe maximum cable lengths and cross-sections [→ chapter 6.2].
- Water or impurities can penetrate the instrument through the cable. In hazardous areas, it is recommended to install the cable in a loop just before entry into the instrument or to slightly bend it to prevent water from entering.



The power supply is defined as 24 VDC. If the input supply voltage at the terminal of the transmitter is less than 10 V, the device will shut down. The 24 V power supply shall fulfill the requirements for a PELV/SELV of EN 60950.



Operating the PrimaX I version in hazardous areas requires an intrinsically safe power supply.

Electrical Connection - PrimaX P

Terminal PrimaX P

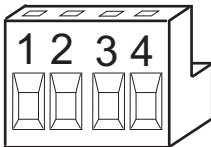


Fig. 3 Terminal PrimaX P [3-wire sensor]

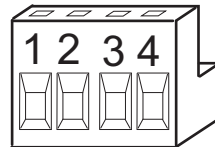


Fig. 4 Terminal PrimaX P [4-wire sensor]

- | | |
|---|---------------------------|
| 1 | Power supply [+], 24 V DC |
| 2 | 0 V DC |
| 3 | 4 – 20 mA [Signal] |
| 4 | empty |

- | | |
|---|---------------------------|
| 1 | Power supply [+], 24 V DC |
| 2 | 0 V DC |
| 3 | 4 – 20 mA [Signal] |
| 4 | Isolated ground |

PrimaX P

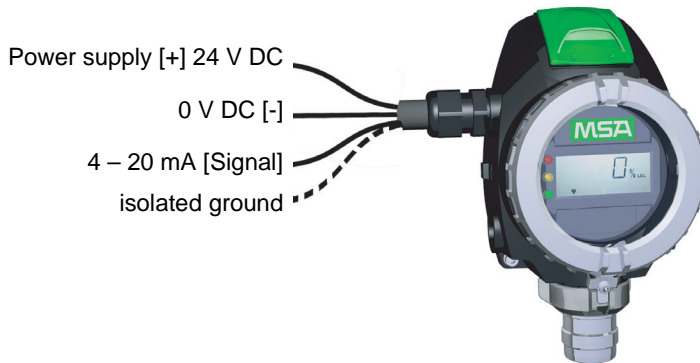


Fig. 5 3-wire/4-wire connection - PrimaX P

- (1) Unscrew the interlock between cover and bayonet joint of sensor.
- (2) Unscrew the aluminium lid of the enclosure.
- (3) Unplug the 4-way terminal block.
 - It is located behind a plastic cover above the display.
- (4) Unscrew clamping nut at the cable gland.
- (5) Put clamping nut on the cable
- (6) Insert cable for connection into the device.
- (7) Connect cable to terminal.
 - Use a shielded cable with 3 wires for the 3-wire sensor
 - Use a shielded cable with 4 wires for the 4-wire sensor
- (8) Tighten cable gland clamping nut, check that cable cannot move within the cable gland.
- (9) Replace enclosure lid and secure the interlock.

Electrical Connection - PrimaX I

Terminal PrimaX I

 


Fig. 6 Terminal PrimaX I

- 1 Power supply [+], 24 V DC
- 2 4 – 20 mA [Signal]

PrimaX I

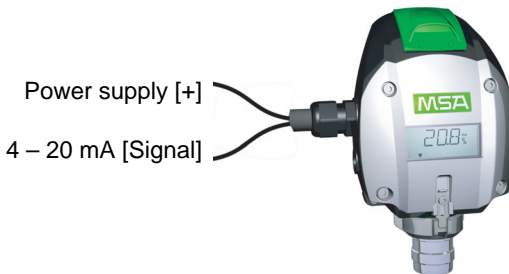


Fig. 7 2-wire connection - PrimaX I

- (1) Remove plastic cover.
 - It is bolted with 4 screws.
- (2) Remove the 2-way terminal block.
 - It is located behind a plastic cover above the display.
- (3) Unscrew clamping nut at the cable gland.
- (4) Put clamping nut on the cable
- (5) Insert cable for connection into the device.
- (6) Connect cable to terminal.
 - Use a 2-wire shielded cable.
- (7) Tighten cable gland clamping nut, check that cable cannot move within the cable gland.
- (8) Replace plastic cover, tighten the screws and secure the interlock.

4 Operation



The device is factory-calibrated and delivered ready for installation. Each device is configured and calibrated for only one specific gas or vapour.

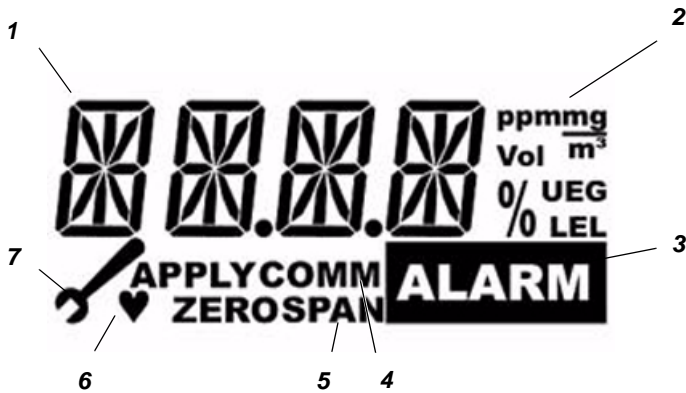


Fig. 8 Display overview

- | | | | |
|---|---------------------------------------|---|-------------------------|
| 1 | Measuring value/Menu//Text dimensions | 5 | Calibration |
| 2 | Units | 6 | Alive signal [flashing] |
| 3 | LOC, alarm indication [optional] | 7 | Maintenance |
| 4 | Signal for an active communication | | |

4.1 Startup

During startup a self-test is performed and the output signal is set to the service current [default 3.0 mA]. The following information is displayed:

Display Test

The display shows all segments.

Note: The PrimaX P also shows all LEDs and afterwards the yellow LED is flashing during the startup procedure.

Software Version

The display shows the firmware version.

Sensor

The display shows the configured type of sensor operating with each individual detector, e.g.: COMB [combustible], CO, H₂S.

Range

The display shows the measuring range predefined for the gas detector, e.g.: 100% LEL.

Countdown

The countdown for sensor stability is displayed.

Normal Operation

After countdown, the gas concentration [ppm, Vol%, % LEL, % UEG, mg/m³] is displayed. The heart symbol flashes to indicate alive status.

4.2 Menu Sequence

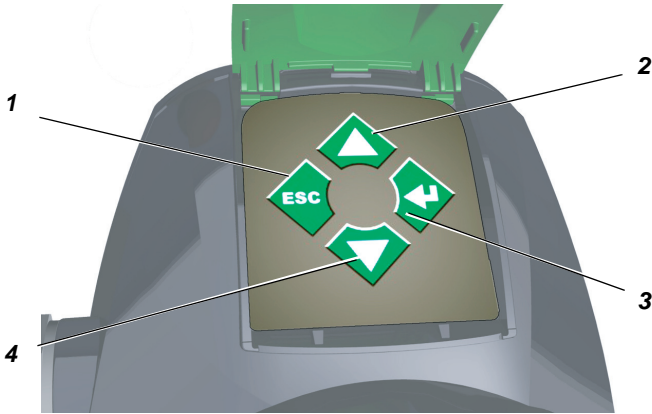


Fig. 9 Keypad - operating buttons

1	ESC button	3	ENTER button
2	UP button	4	DOWN button

To navigate in the menu sequence, 4 buttons are available.

In general:

- (1) Press ENTER button to get access to the menu sequence.
- (2) Press UP or DOWN button till
 - ▷ the desired menu is displayed.
- (3) Press ENTER button to
 - ▷ get access to the menu,
- (4) Press ESC button to cancel the process.

The following table lists the menu items. Detailed descriptions can be found in the chapters 4.3, 4.4 and 4.5.

Menu item	Text	Password?
M-01	Calibration	Yes
M-02	ZERO Calibration	Yes
M-03	Show Test Gas Concentration	No
M-04	Setup Calibration	Yes
M-05	Sensor Exchange	Yes
M-06	LCD and LED Test	No
M-07	Loop Test	Yes
M-08	Device Info	No
M-09	Sensor Info	No
M-10	Changing the Range	Yes
M-00	Reset Alarm	Yes

4.3 Calibration



Warning!

The test gases used for calibration are possibly posing a health risk. Proper ventilation or extraction has to be ensured.

General

The calibration must be done at regular intervals in accordance with applicable national and regional regulations.

The device is calibrated at the factory. Nevertheless, it is recommended to recalibrate the device after installation. The frequency of calibration depends on the duration of use and the chemical exposure of the sensor. New sensors must be calibrated frequently until it is clear from the calibration data that they have stabilised. Suitable regulators and pipes for calibration must be used.



A calibration cap is recommended for sensor calibration, flow rate 1l/ min [$\pm 20\%$].



Connect power to the device at least one hour before attempting a calibration.

Carry out the calibration during commissioning as well as at regular intervals. This ensures optimum operation of the sensor.



It is recommended that all calibration components are connected before starting a calibration as it is necessary to apply test gas to the device during a countdown.



When monitoring flammable gas in safety related applications the PrimaX must be calibrated with a known concentration of the gas being monitored.

The lower explosive limits [LEL] of the gases and vapours in the following example were taken from EN 60079-20-1. Local regulations may specify different LEL values; always ensure the correct values are used.

It is recommended that the PrimaX zero is calibrated using clean air, free of measuring gas, and calibration gas of approximately 50 % of measuring range [comb. and TOX] in air of the gas being monitored. The recommended calibration gas for oxygen is 50% of measuring range, but for a measuring range 0-25 vol% O₂, the device can be calibrated using 20.9 vol% O₂.



For oxygen a zero calibration with gas is not required, it is performed internally.

Calibration example for Methanol

Methanol calibration gas concentration being used = 3,5 Vol%

Methanol volume concentration for 100%LEL = 6,0 Vol%

Methanol calibration gas concentration in %LEL

$$3,5 \text{ Vol\% CH}_4\text{O} \times \frac{100\% \text{ LEL}}{6,0 \text{ Vol\% CH}_4\text{O}} = 58,3 \text{ \% LEL}$$

Calibration Procedure

The calibration can be performed as a manual or an automatic calibration [→ M-04].

Automatic Calibration [automatic]: a countdown is displayed. After the countdown the value is measured and displayed. When the value is stable the current value is selected automatically.

Manual Calibration [manual]: the measuring value is displayed. When the value is stable press ENTER to select the current value.

Waiting for calibration gas

After starting any calibration step, calibration gas [zero or test gas] must be applied until calibration step is finished.

Calibration Steps



The calibration procedure can be cancelled at any time by pressing ESC. The previous transmitter calibration will be used.

[M-01] - ZERO and SPAN Gas Calibration

- (1) Press ENTER and select menu 1.
- (2) Press ENTER button.
- (3) Enter password [→ chapter 4.5].
- (4) Apply zero gas [synthetic air].
- (5) Wait until countdown is finished [automatic] or press ENTER [manual].
 - ▷ OK is displayed.
- (6) Apply test gas.
- (7) Wait until calibration is finished [automatic] or press ENTER [manual].
 - ▷ OK is displayed.
 - ▷ Idle time countdown starts, during this time the test gas can be removed and the output signal remains on service current level.
- (8) Remove test gas during the countdown.

[M-01] - Oxygen Calibration

- (1) Press ENTER and select menu 1.
- (2) Press ENTER button.
- (3) Enter password [→ chapter 4.5].
- (4) Apply synthetic air.
- (5) Wait until countdown is finished [automatic] or press ENTER [manual].
 - ▷ OK is displayed.
- (6) The device goes to measuring mode.

[M-02] - ZERO Gas Calibration

- (1) Press ENTER and select menu 2.
- (2) Press ENTER button.
- (3) Enter password [→ chapter 4.5].
- (4) Apply zero gas [synthetic air].
- (5) Wait until calibration is finished [automatic] or press ENTER [manual].
 - ▷ OK is displayed.
- (6) The device goes to measuring mode.

4.4 Maintenance and Info**[M-03] - Show Test Gas Value**

- (1) Press ENTER and select menu 3.
- (2) Press ENTER button.
 - ▷ Test gas concentration is displayed.
- (3) Press ENTER button to go back to Menu or ESC to go back to measuring mode.

[M-04] - Setup Calibration

This menu is used to set the test gas concentration for span calibration and all calibration countdown times.

- (1) Press ENTER and select menu 4.
- (2) Press ENTER button.
- (3) Enter password [→ chapter 4.5].
- (4) Set the test gas concentration with the UP or DOWN button.
- (5) Press ENTER button.
- (6) Set the zero calibration countdown time in seconds with the UP or DOWN button.
 - **Note:** time = 0 → [manual] zero calibration, otherwise an [automatic] calibration is performed by the device.
- (7) Press ENTER button.
- (8) Set the span calibration countdown in seconds with the UP or DOWN button.
 - **Note:** time = 0 → [manual] span calibration, otherwise an [automatic] calibration is carried out by the device.
- (9) Press ENTER button.

- (10) Set the idle time countdown in seconds with the UP or DOWN button.
 (11) Press ENTER button.

[M-05] - Sensor Exchange

This menu initiates the initial calibration and resets the sensor lifetime counter. OX/TOX sensors can be exchanged under power [hot swapped] with this function.



Attention!

Hot swaps must not be carried out for COMB sensors.
 Only OX/TOX sensors can be exchanged with this menu.
 For COMB sensors with this menu only the initial calibration is initiated and the sensor life time is reset.

If an [OX/TOX] sensor is connected:	If a COMB sensor is connected:
(1) Press ENTER and select menu 5. (2) Press ENTER button. (3) Enter password [→ chapter 4.5].	(1) Press ENTER and select menu 5. (2) Press ENTER button. (3) Enter password [→ chapter 4.5].
- An hourglass symbol is shown to signify the time span [max. 15 min] during which it is possible to hot-swap a sensor without triggering an error code	(4) [Perform a ZERO and SPAN calibration [M-01].
(5) Change the sensor during this time span. (6) Press ENTER or ESC to start the running-in time countdown. (7) [Perform a ZERO and SPAN or Oxygen calibration [M-01].	



Sensors that are no longer required have to be disposed of in an environmentally compatible way.

[M-06] - LCD/LED Test

LCD and LED test [LED only available in PrimaX P]. All segments will be displayed and the LEDs will flash sequentially.

- (1) Press ENTER and select menu 6.
- (2) Press ENTER button.

[M-07] - Loop Test

In this menu a 4 - 20 mA loop test will be performed.

- (1) Press ENTER and select menu 7.
- (2) Press ENTER button.
- (3) Enter password [→ chapter 4.5].
 - ▷ The loop test mA value is displayed [default value = 12 mA].
- (4) Press UP or DOWN to change the value.
- (5) Press ENTER button to start the test.
- (6) Press ENTER button to go back to menu or ESC to go back to measuring mode.

[M-08] - Device Information

In this menu device information is shown, i.e. gas type, measuring range, firmware version.

- Go through the information with the ENTER button.

[M-09] - Sensor Information

This menu shows the minimum and maximum measured gas concentrations, which can be reset by holding the UP or DOWN button.

It shows the sensor life time in months since sensor exchange [→ M-05].

If a COMB or a TOX sensor is connected this menu shows the response time [as calculated during zero span calibration].

If an OX/TOX sensor is connected this menu shows the measured mV value.

If a COMB sensor is connected this menu shows the detector [U_D], compensator [U_K] and differential voltage [U_X] in mV.

- Go through the information with the ENTER button.

[M-10] - Range Selection**Attention!**

Test gas concentration has to be checked and device has to be calibrated if the range is changed.

This menu allows to set up the optional measuring ranges for connected OX/TOX sensors.

- (1) Press ENTER and select menu 10.
- (2) Press ENTER button.
- (3) Enter password [→ chapter 4.5].
- (4) Press UP or DOWN button to select the range and/or the measuring unit [TOX: ppm, mg/m³; COMB: LEL, UEG].
- (5) Press ENTER button.
 - ▷ OK is displayed.
 - ▷ The calibration is set to invalid and service current is supplied until recalibrated.

[M-00] - Reset Alarm

menu to reset a LOC of combustible sensor or an alarm. It appears only in the menu if there is a latched LOC or alarm.

- (1) Press ENTER and select menu 0.
- (2) Press ENTER button.
- (3) Enter password [→ chapter 4.5].
 - ▷ Success message confirms that latched alarm is reset.

4.5 Password

Menus which should only be changed by qualified and authorised persons are locked by a four digit password.



The default password is 0000.

After entering the password menu, the values of the digits will be set from left to right:

- (1) Press UP or DOWN button to change the value.
 - ▷ The value will be increased or decreased.
- (2) Press ENTER button to get to the next digit.
 - With ESC button one digit can be backspaced.
 - ▷ If all four digits are entered, the password will be validated.

4.6 Changeable Parameters

Values	default	minimum	maximum
Span/Test Gas Value	regarding sensor [e.g.: CO = 60ppm, H ₂ S 10ppm, O ₂ = 20.8 vol%, combustible = 50% LEL]	10% of Range	100% of Range
Zero Calibration Time	30 s	0 s	2000 s
Span Calibration Time	30 s	0 s	2000 s
Idle Time after calibration	30 s	10 s	2000 s
Range	See 6.4 List of detectable gases		
Loop Test	12 mA	2 mA with 2-wire version 0 mA with 3/4-wire version	22 mA

4.7 Optional HART Module and Relay

HART

Introduction

"HART" is an acronym for Highway Addressable Remote Transducer. The HART Protocol makes use of the Bell 202 Frequency Shift Keying [FSK] standard to superimpose digital communication signals at a low level on top of the 4 - 20 mA. The HART Protocol provides two simultaneous communication channels: the 4 - 20 mA analog signal and a digital signal. The 4 - 20 mA signal communicates the primary measured value [in the case of a field instrument] using the 4 - 20 mA current loop. Additional device information is communicated using a digital signal that is superimposed on the analog signal.

PrimaX is registered with the HART foundation and can be accessed at <http://www.hartcomm.org/>

The device is available with an optional HART module or a module with HART and Relays for alarm and failure. It uses the HART Protocol Revision 7 and can only communicate with HART Masters who support revision 7 or higher.



The following HART functions are also available:

ZERO SPAN Calibration / Oxygen Calibration; ZERO Calibration; Sensor Exchange; LCD/LED Test; Loop Test; Range setup; Reset alarm; Readout all measured data and information.

Electrical Installation



Fig. 10 HART ports

1 Optional HART port

For wiring diagrams → chapter 10.6.

Relays

Relay nominal switching capacity [resistive load]:

Alarm Relay 2A / 30V DC
 Failure Relay 2A / 30V DC



Fig. 11 Location of Relay

1 Relay Terminals

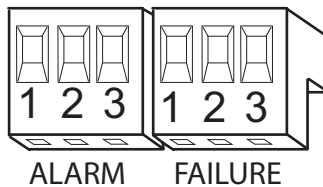


Fig. 12 Relay Terminals

Alarm Relay

- 1 Normally closed energised[NC]
- 2 Common [COM]
- 3 Normally open energised[NO]

Failure Relay

- 1 Normally closed energised[NC]
- 2 Common [COM]
- 3 Normally open energised[NO]

Relay Operation

Startup

If relays are used the alarm threshold will be displayed at startup

Menu Sequence

Menu item	Text	Password?
M-11	Relay Info	No
M-12	Relay Setup	Yes
M-13	Relay Test	Yes

Relay Operation

[M-11] - Relay Info

- (1) Press ENTER and select menu 11.
- (2) Press ENTER button.
- (3) Go through the information with the ENTER button.
 - ▷ It shows:
 - The alarm threshold and if the alarm is activated with a rising or falling gas concentration.
 - if an alarm would be latched.
 - the alarm relay delay time in seconds.
 - if the alarm relay is normally energised.
 - the failure relay delay time in seconds.
 - if the failure relay is normally energised.

[M-12] - Relay Setup

- (1) Press ENTER and select menu 12.
- (2) Press ENTER button.
- (3) Enter password [→ chapter 4.5].
- (4) Set the alarm threshold with the UP or DOWN button.
- (5) Press ENTER button.
- (6) Set rising or falling alarm option with the UP or DOWN button.
- (7) Press ENTER button.
- (8) Set if latched with the UP or DOWN button.
- (9) Press ENTER button.
- (10) Set the alarm relay delay with the UP or DOWN button.
- (11) Press ENTER button.
- (12) Set alarm relay normally energised option with the UP or DOWN button.
- (13) Press ENTER button.
- (14) Set the failure relay delay with the UP or DOWN button.
- (15) Press ENTER button.
- (16) Set the failure relay normally energised option with the UP or DOWN button.
- (17) Press ENTER button.

[M-13] - Relay Test

- (1) Press ENTER and select menu 13.
- (2) Press ENTER button.
- (3) Enter password [→ chapter 4.5].
- (4) The relays are now Switched and can be tested.
- (5) Press ENTER button to go back to menu or ESC to go back to measuring mode.

Changeable Parameters for Relays

Values	default	minimum	maximum
Alarm threshold	30% of Range [O ₂ = 20 vol%]	5 % of Range	100% of Range
Alarm relay normally en- ergised	yes	yes	no
Latch alarm	yes	yes	no
Alarming direction	O ₂ decrease; other increase	Increasing	Decreasing
Alarm delay time	0 s	0 s	600 s
Failure relay normally en- ergised	yes	yes	no
Failure relay delay time	0 s	0 s	600 s



Setting required for ATEX conditions:

Latch alarm = yes: Alarm output self-retaining

Alarm delay time = 0s, no delay of output

Failure relay normally energised = yes

Changeable Parameters with HART



For all parameters which can be changed over keypad see chapter 4.6.

For relay parameters which can be changed over keypad see above.

In case of parameter modifications the functions have to be checked before normal operation.

Values	default	minimum	maximum
Password	0000	0000	9999
Tag	MSA	-	-
Description	PrimaX	-	-
Long tag		-	-
Message		-	-
Enable LOC if combustible	enable	enable	disable



In case of very high flammable concentrations >100%LEL the device is able to lock all outputs [LOC]. This function shall be used for standalone applications according to ATEX requirements.

Output States

State	Failure Relay	Alarm Relay
Normal		
Startup	Startup state [default: switched]	
Calibration		
Latched voltage overrange	Switched	
Loop not connected	Switched	
Underrange	Switched	
Error	Switched	
Safety critical error	Switched	
LOC [combustible]		Switched
Latched LOC [combustible]		Switched
Alarm threshold exceed		Switched

Switched: the relay state has switched from the normal state. The normal state can be set to energised if alarm/failure or de-energised if alarm/failure. Normally de-energised if alarm/failure meets the ATEX and SIL requirements. In case of switched relays the device will go to the normal state when the related condition [non-latched alarm and/or fail] has been removed. For additional information about output states, see chapter 10, Appendix.

LOC: The PrimaX Gas Monitor has been exposed to a high gas concentration [above the LEL], and the over-range condition still exists.

Latched LOC: The PrimaX Gas Monitor has been exposed to a high gas concentration [above the LEL], and there is a possibility that the over-range condition may still exist.

5 Maintenance


5.1 Changing the Sensors

**Danger!**


Remove and reinstall sensors carefully, ensuring that the components are not damaged; otherwise the approval may be adversely affected, wrong readings could occur, and persons relying on this product for their safety could sustain serious personal injury or death.




Before changing the sensor, the Sensor Exchange mode must be activated. This ensures the sensor must be calibrated after exchange and the sensor lifetime counter is reset. See chapter 4.2 M-05.

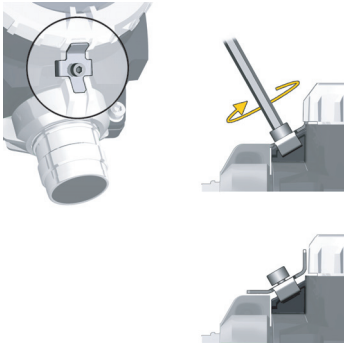**Remove Interlock**

- (1) Unscrew the socket head screw.
- (2) Remove the interlock.

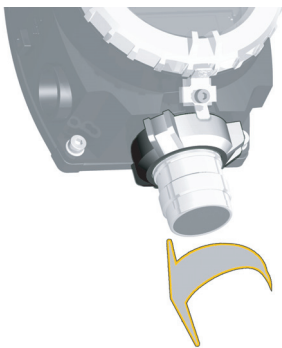**Remove Bayonet Joint**

- (3) Turn the bayonet ring counter-clockwise.
- (4) Remove the bayonet ring by pulling it down.

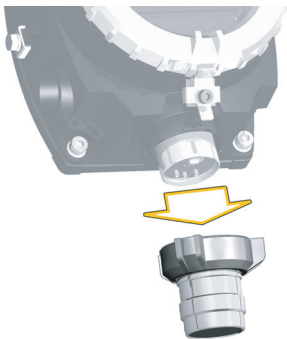**Replace Sensor**

- (5) Unplug the sensor carefully.
- (6) Plug in the new sensor carefully.
- (7) Replace the bayonet ring.
- (8) Replace the interlock.

6 Technical Data

6.1 Specifications

	PrimaX P	PrimaX I
Enclosure	aluminium enclosure flameproof IP 67 ingress protection	plastic enclosure intrinsically safe IP 66 ingress protection
Dimensions in mm [Height X Width X Depth]	220 X 162 X 100	220 X 162 X 81
Weight	1.6 kg	1.2 kg
Humidity	15 % to 90 % rel. humidity	15 % to 90 % rel. humidity
Power supply	19.2 V - 28.0 V	19.2 V - 28.0 V
Power consumption	3 W	0.7 W
Temperature range [instrument]	-40 to +70 °C	-40 to +70 °C
Temperature range [sensor]	see sensor	see sensor
Signal output	4 – 20 mA	4 – 20 mA
HART [option]	yes	yes
Relay [option]	yes	no
Signal output tolerance	1 %	1 %
Pressure	80 – 120 kPa	80 – 120 kPa
Max. load resistance	300 Ohm	300 Ohm
Air velocity	0 – 6 m/s	0 – 6 m/s

Relay nominal switching capacity [resistive load]:

Alarm Relay 2A / 30V DC
Failure Relay 2A / 30V DC

Measuring Methods

Oxygen Electrochemical sensor
Toxic gases Electrochemical sensor
Combustible gases Thermo-catalytic sensor

Refresh Rate of Output Signals

4 - 20 mA output signal [analog]	100 ms
Alarm [LED and relay]	100 ms
Failure [LED and relay]	100 ms
Display [measuring value]	1 s
Display [alarm]	2100 ms

6.2 Cable Lengths and Cross-sections

The maximum load resistance for all combinations is 300 Ohm.

Sensor type	Cross-section	Max. length at 24 V DC	
Toxic Gases and Oxygen Sensors with 4 – 20 mA Signal Output [2- wire Sensor]	1.0 mm ²	1960 m	
	1.5 mm ²	2940 m	
Catalytic Combustible Gas Sensor with 4 – 20 mA Signal Output [3- wire Sensor]		without relay	with relay
	1.0 mm ²	980 m	700 m
	1.5 mm ²	1470 m	1050 m
Toxic Gases and Oxygen Sensors with 4 – 20 mA Signal Output [3- wire Sensor]		without relay	with relay
	1.0 mm ²	3920 m	2000 m
	1.5 mm ²	5880 m	3000 m
Catalytic Combustible Gas Sensor with 4 – 20 mA Signal Output [4- wire Sensor]		with relay	
	1.0 mm ²	420 m	
	1.5 mm ²	630 m	
Toxic Gases and Oxygen Sensors with 4 – 20 mA Signal Output [4- wire Sensor]	1.0 mm ²	1848 m	
	1.5 mm ²	2772 m	

6.3 Performance Specifications

Warm up time	Combustible	95 s
	OX/TOX	36 s
Storage temperature	-40 °C to +70 °C or temperature range of the sensor	

6.4 List of Detectable Gases

Gas	Default range	Selectable range[s]	Temperature Range
Ammonia [NH ₃]	100 ppm	50 ppm	-20 – 40 °C
Ammonia [NH ₃]	500 ppm	1000 ppm	-20 – 40 °C
Carbon Monoxide [CO]	200 ppm	100 ppm	-20 – 50 °C
		500 ppm	
		1000 ppm	
Chlorine [Cl ₂]	10 ppm	5 ppm	-20 – 40 °C
Hydrogen [H ₂]	1000 ppm	-	-20 – 50 °C
Hydrogen Chloride [HCl]	30 ppm	10 ppm	-20 – 40 °C
		20 ppm	
Hydrogen Cyanide [HCN]	30 ppm	10 ppm	-40 – 40 °C
		20 ppm	
		50 ppm	
Hydrogen Sulphide [H ₂ S]	50 ppm	10 ppm	-40 – 50 °C
		20 ppm	
		100 ppm	
Methane [CH ₄]	100 % LEL	-	-40 –70 °C
Nitric Oxide [NO]	100 ppm	-	-30 – 50 °C
Nitrogen Dioxide [NO ₂]	10 ppm	20 ppm	-20 – 50 °C
		100 ppm	
Oxygen [O ₂] part no. 10112718 [recommended]	25 vol. %	10 vol. %	-30 – 55 °C
Oxygen [O ₂] part no. 10148289	25 vol. %	10 vol. %	-20 – 50 °C

Gas	Default range	Selectable range[s]	Temperature Range
Propane [C ₃ H ₈]	100 % LEL	-	-40 – 70 °C
Sulphur Dioxide [SO ₂]	50 ppm	10 ppm 20 ppm 100 ppm	-20 – 50 °C

Gases	Zero drift	Full scale drift	Zero deviation	Lower limit of the measuring range
CO	≤ 2 ppm/month	≤ 5 %/month	≤ 4 % of full scale	3 % of full scale
H ₂ S	≤ 2 ppm/month	≤ 5 %/month	≤ 2 % full scale, at least 1 ppm	1 % full scale, at least 1 ppm

Response time [diffusion mode]

These values are only valid for new sensors and, unless otherwise stated, they refer to an ambient temperature of 20 °C.

Oxygen	Response time	
	t ₂₀	t ₉₀ /t ₁₀
	≤ 8 s	≤ 25s

Toxic	Response time	
	t ₉₀	t ₁₀
CO	≤ 20s	≤ 44s
H ₂ S	≤ 12s	≤ 32s

Combustible	Response time		Recovery time	
	t ₅₀	t ₉₀	t ₅₀	t ₁₀
Methane	≤ 10s	≤ 18s	≤ 10s	≤ 18s
Propane	≤ 12	≤ 20s	≤ 12s	≤ 20s

Combustible	Response time		Recovery time	
	t50 ^{*)}	t90 ^{*)}	t50 ^{*)}	t10 ^{*)}
1-Ethoxy-2-Propanol	≤ 20s	≤ 48s	≤ 20s	≤ 48s
Hydrogen	≤ 10s	≤ 18s	≤ 10s	≤ 18s
Methane	≤ 10s	≤ 18s	≤ 10s	≤ 18s
Propane	≤ 12	≤ 20s	≤ 12	≤ 20s

^{*)}Response times with calibration cap and a flow rate of 1l / min



The response time will be increased up to 60 seconds by using the Sensor gard.

6.5 Sensor Response to Interferants



Interference factors may differ from sensor to sensor and with life time. It is not advisable to calibrate with interference gases.

This table does not claim to be complete. The sensor might also be sensitive to other gases.

Gas Sensor	Interferant		
Combustible	wide variety of combustible gases and vapours		
Ammonia [NH ₃]	20 ppm H ₂ S 2 ppm	20 ppm SO ₂ -40 ppm	
Carbon Monoxide [CO]	100 ppm NO 69 ppm	100 ppm H ₂ 40 ppm	100 ppm etha- nol 4 ppm
	100 ppm NO ₂ -5 ppm		
Chlorine [Cl ₂]	1 ppm Br ₂ 1 ppm	2.4 ppm ClO ₂ 0.55 ppm	20 ppm H ₂ S 0.1 ppm
	10 ppm NO ₂ 4.5 ppm	0.25 ppm O ₃ 0.11 ppm	
Hydrogen [H ₂]	300 ppm CO <60 ppm	15 ppm H ₂ S <3 ppm	35 ppm NO 10 ppm
	100 ppm HCN 3 ppm	100 ppm C ₂ H ₄ 80 ppm	
Hydrogen Chloride [HCl]	100 ppm NH ₃ 0.1 ppm	0.2 ppm AsH ₃ 0.7 ppm	5 ppm Cl ₂ 0.3 ppm
	20 range HCN 7 ppm	20 range H ₂ S 13 ppm	100 range NO 45 ppm
	10 ppm NO ₂ 0.3 ppm	0.1 ppm PH ₃ 0.3 ppm	20 ppm SO ₂ 8 ppm
Hydrogen Cyanide [HCN]	100 ppm NO -5 ppm	10 ppm NO ₂ -7 ppm	

Gas Sensor	Interferant		
Hydrogen Sulphide [H ₂ S]	100 ppm Cl ₂ -9 ppm	100 ppm NO ₂ -21 ppm	100 ppm NO 1 ppm
	100 ppm HCN 1 ppm	100 ppm SO ₂ 1 ppm	
Nitric oxide [NO]	50 ppm NO <0.5 ppm	20 ppm SO ₂ <-2.5 ppm	10 ppm Cl ₂ 100 ppm
	400 ppm H ₂ <0.1 ppm	20 ppm H ₂ S <-40 ppm	400 ppm CO <0.1 ppm
	20 ppm NH ₃ <0.1 ppm	50 ppm C ₂ H ₂ <0.1 ppm	
Nitrogen Dioxide [NO ₂]	50 ppm NO ₂ <5 ppm	20 ppm SO ₂ <2 ppm	10 ppm Cl ₂ <15 ppm
	400 ppm H ₂ <0.1 ppm	20 ppm H ₂ S <15 ppm	400 ppm CO <0.1 ppm
	20 ppm NH ₃ <0.1 ppm		
Oxygen [O ₂]	no data		
Sulphur Dioxide [SO ₂]	300 ppm CO <3 ppm	5 ppm NO ₂ -5 ppm	

6.6 PrimaX P List of Combustible Gases and Vapours detectable with Catalytic Sensor Part No. 10112716

Relative response factors of tested gases with reference to Propane

For the gases or vapours shown in the tables of this chapter the response curves have been tested according to EN 60079-29-1:2007. If the LEL of a substance was not listed in EN 60079-20-1:2010, the LEL has been taken from the Chemsafe data base (Dechema, Frankfurt). Due to legal requirements other locally used LEL values might be mandatory.

It is highly recommended that the gas detector is exposed to clean air when calibrating the zero and a mixture of the target gas in air with a concentration of approximately 50% LEL.

If calibration with the target gas is not possible a reference calibration can be performed with 0.85 % (v/v) Propane C₃H₈ in air and using the relative response data given in the table of this chapter. These values are only valid for new sensors and, unless otherwise stated, they refer to an ambient temperature of 20°C. If using a reference gas to calibrate the gas detector the displayed values may vary by up to +/- 20% from the target gas concentration.

Reference calibration example for 50% Methanol:

- | | | |
|-----|---|---|
| (1) | Relative response factor for Methanol from table | = 0.62 |
| (2) | Propane calibration gas concentration being used
C ₃ H ₈ | = 0.89 Vol% |
| (3) | Propane volume concentration for 100% LEL | = 1.7 Vol% |
| (4) | Propane calibration gas concentration in % LEL | |
| | = 0.89 Vol% C ₃ H ₈ x | $\frac{100\% \text{ LEL}}{1.7 \text{ Vol\% C}_3\text{H}_8}$ |
| | | = 52.4% LEL |
| (5) | Gas detector span setting | = 52.4% LEL x 0.62 = 32.5% LEL |

Gas	CAS-No.	LEL [vol%]	Response time [s] [t50] *)	Response time [s] [t90] *)	Gas/ Fluid	Response factor
Acetaldehyde [C ₂ H ₄ O]	75-07-0	4.0			fluid	0.64 ^M
Acetic acid [C ₂ H ₄ O ₂]	64-19-7	4.0			fluid	1.51 ^M
Acetic anhydride [[CH ₃ CO] ₂ O]	108-24-7	2.0			fluid	1.56 ^M
Acetone [C ₃ H ₆ O]	67-64-1	2.5	≤ 9	≤ 24	fluid	0.94 ^D
Acetylene [C ₂ H ₂]	74-86-2	2.3			gas	0.76 ^M
Acrylonitrile [C ₃ H ₃ N]	107-13-1	2.8			fluid	0.75 ^M
Allyl alcohol [C ₃ H ₆ O]	107-18-6	2.5			fluid	0.90 ^M
Ammonia [NH ₃]	7664-41-7	15.0			gas	0.38 ^M
Benzene [C ₆ H ₆]	71-43-2	1.2			fluid	1.21 ^M
1.3-Butadiene [C ₄ H ₆]	106-99-0	1.4			gas	1.01 ^M
i-Butane [[CH ₃] ₃ CH]	75-28-5	1.3			gas	1.20 ^M
n-Butane [C ₄ H ₁₀]	106-97-8	1.4			gas	1.09 ^M
n-Butanol [Butylal- cohol] [C ₄ H ₁₀ O]	71-36-3	1.4			fluid	1.40 ^M
2-Butanone [C ₄ H ₈ O]	78-93-3	1.5	≤ 12	≤ 31	fluid	1.13 ^D
i-Butylacetate [C ₆ H ₁₂ O]	110-19-0	1.3			fluid	1.48 ^M
n-Butylacetate [C ₆ H ₁₂ O]	123-86-4	1.2			fluid	1.56 ^M
Butylbenzene [C ₁₀ H ₁₄]	104-51-8	0.8			fluid	3.85 ^M
1-Butylene [C ₄ H ₈]	106-98-9	1.6			gas	0.94 ^M
i-Butylene [C ₄ H ₈]	115-11-7	1.6			gas	0.93 ^M
Cyclohexane [C ₆ H ₁₂]	110-82-7	1.0			fluid	1.49 ^M

Gas	CAS-No.	LEL [vol%]	Response time [s] [t50] ^{*)}	Response time [s] [t90] ^{*)}	Gas/ Fluid	Response factor
Cyclopentane [C ₅ H ₁₀]	287-92-3	1.4			fluid	1.05 ^M
Diethylether [C ₄ H ₁₀ O]	60-29-7	1.7			fluid	1.16 ^M
1,4-Dioxane [C ₄ H ₈ O ₂]	123-91-1	1.4			fluid	2.22 ^M
Ethane [C ₂ H ₆]	74-84-0	2.4			gas	0.87 ^M
Ethanol [C ₂ H ₆ O]	64-17-5	3.1	≤ 11	≤ 31	fluid	0.89 ^D
Ethene [C ₂ H ₄]	74-85-1	2.3			gas	0.77 ^M
1-Ethoxy-2 propanol [C ₅ H ₁₂ O ₂]	1569-02-4	1.3	≤ 14	≤ 46	fluid	1.71 ^D
Ethyl acetate [C ₄ H ₈ O ₂]	141-78-6	2.0	≤ 13	≤ 46	fluid	1.12 ^D
Ethyl acrylate [C ₅ H ₈ O ₂]	140-88-5	1.4			fluid	1.45 ^M
Ethyl benzene [C ₈ H ₁₀]	100-41-4	0.8			fluid	1.49 ^M
Ethylen oxide [C ₂ H ₄ O]	75-21-8	2.6			gas	0.99 ^M
Gasoline 65/95	64742-49-0	0.9	≤ 10	≤ 21	fluid	1.40 ^D
n-Heptane [C ₇ H ₁₆]	142-82-5	0.85			fluid	1.75 ^M

Gas	CAS-No.	LEL [vol%]	Response time [s] [t50] *	Response time [s] [t90] *	Gas/ Fluid	Response factor
n-Hexane [C ₆ H ₁₄]	110-54-3	1.0			fluid	1.48 ^M
Hydrogen [H ₂]	1333-74-0	4.0	≤ 6	≤ 16	gas	0.53 ^D
Methane [CH ₄]	74-82-8	4.4			gas	0.55 ^M
Methanol [CH ₄ O]	67-56-1	6.0			fluid	0.62 ^M
Methyl tert-butylether [C ₅ H ₁₂ O]	1634-04-4	1.5			fluid	1.12 ^M
n-Nonane [C ₉ H ₂₀]	111-84-2	0.7			fluid	1.85 ^M
n-Pentane [C ₅ H ₁₂]	109-66-0	1.1			gas	1,38 ^M
Propane [C ₃ H ₈]	74-98-6	1.7	≤ 14	≤ 24	gas	1.00 ^D
1-Propanol [C ₃ H ₈ O]	71-23-8	2.1	≤ 10	≤ 50	fluid	0.98 ^D
2-Propanol [C ₃ H ₈ O]	67-63-0	2.0	≤ 11	≤ 25	fluid	1.04 ^D
Propene [C ₃ H ₆]	115-07-1	2.0	≤ 8	≤ 19	gas	0.85 ^D
Propylene oxide [C ₃ H ₆ O]	75-56-9	1.9			fluid	1.15 ^M
Toluene [C ₇ H ₈]	108-88-3	1.0	≤ 15	≤ 46	fluid	1.22 ^D
Vinyl chloride [C ₂ H ₃ Cl]	75-01-4	3.6			gas	1.08 ^M
Xylenes [C ₈ H ₁₀]	1330-20-7	0.9			fluid	1.47 ^M

All response factors relate to propane (measured at 50 % LEL; 0.85 % (v/v))

* Response times are with a flow through adapter and a gas flow of 1 l/min

D Response factor defined by DEKRA EXAM

M Response factor defined by MSA (not included in the EC-Type Examination Certificate BVS 10 ATEX E 009 X)

7 Approvals

7.1 Marking, Certificates and Approvals According to the Directive 94/9/EC (ATEX)

PrimaX P

Manufacturer: MSA AUER GmbH
Thiemannstraße 1
D-12059 Berlin

Product: **PrimaX P**

Type of protection: EN 60079-0:2009, EN 60079-1:2007,
EN 60079-11:2007, EC 60079-31:2010, EN 61241-11:2007

Performance: EN 60079-29-1:2007, EN 50104:2010, EN 50271:2010

Gas: Measure range: 0-100% LEL
Methane, Propane, 2-Butanone, Acetone, Ethanol,
Ethyl acetate, [FAM-] Standard mineral spirit 65/95,
2-Propanol, Propene, Toluene, Hydrogen,
1-Ethoxy-2-Propanole [40°C]
Oxygen: 0-10% [V/V], 0-25% [V/V]

Other gases: PFG 11 G 001: EN 45544 -1:1999; EN 45544 -2:1999
Tox: H₂S: 0-20 ppm; 0-100 ppm; CO:0-100 ppm; 0-1000 ppm

Marking: Prima X P $U_m = 60$ VDC

Main housing



II 2G Ex d ia [ia] IIC T4 Gb

II 2D Ex tb ia [ia] IIIC T130°C Db IP 67

-40°C ≤ Ta ≤ +70°C

Prima X
Combustible
sensor



Ex d IIC T4 Gb

Ex tb IIIC T130°C Db IP 67

-40°C ≤ Ta ≤ +70°C

Prima X

Ox/Tox sensor



Ex d ia IIC T4 Gb

Ex tb ia IIIC T130°C Db IP 67

-40°C ≤ Ta ≤ +70°C

Option: HART Module Connector, only for temporary connection of an intrinsic safe HART Field Communicator
 $P_o \leq 200 \text{ mW}$, $U_o \leq 2,7 \text{ V}$, $I_o \leq 140 \text{ mA}$, $L_o \leq 10 \text{ } \mu\text{H}$, $C_o \leq 1 \text{ nF}$
 $P_i \leq 5 \text{ mW}$, $U_i \leq 5 \text{ V}$, $I_i \leq 1 \text{ mA}$, $L_i = 0$, $C_i = 0$
 Relais: switching voltage = 30 VDC; switching current = 2 ADC

EC-Type Examination Certificate: BVS 10 ATEX E009 X
 Quality Assurance Notification: 0158
 Year of Manufacture: see Label
 Serial Nr.: see Label

Special Conditions for Safe Use

- Do not open the instrument when energised.
- For dust applications the installation conditions according to EN 61241-14 has to be considered.
- Intensive electrostatic charging processes have to be prevented on the instrument label.
- Maintenance or repairment according to the type of protection "d" is only allowed by the manufacturer

Cable gland

- M25 x 1,5; Torque 8 -12 Nm; only ATEX certified versions for gas and dust shall be used.
- NPT ¾"- 14; fixture with 2 layer PTFE sealing tape or according to the instructions of the NPT supplier; when removed, new PTFE sealing has to be used after reinstalling; only ATEX certified versions for gas and dust shall be used.

EMC Conformance according to the Directive 2004 / 108 / EC

EN 50270:2006 Type 2, EN 61000-6-3:2007

PrimaX I

Manufacturer: MSA AUER GmbH
Thiemannstraße 1
D-12059 Berlin

Product: **PrimaX I**

Type of protection: EN 60079-0:2009, EN 60079-11:2007, EN 60079-26:2007
EN 61241-11:2006

Performance EN 50104:2010, EN 50271:2010

Gas: Oxygen: 0-10% [V/V], 0-25% [V/V]

Other gases: PFG 11 G 001: EN 45544 -1:1999; EN 45544 -2:1999

Tox: H₂S: 0-20 ppm; 0-100 ppm; CO: 0-100 ppm; 0-1000 ppm

Marking: Prima X I



II 1G Ex ia IIC T4 Ga

II 2D Ex ia IIIC T130°C Db

-40°C ≤ Ta ≤ +70°C

$P_i \leq 770 \text{ mW}$, $U_i \leq 28 \text{ V}$, $I_i \leq 110 \text{ mA}$, $L_i = 0$, $C_i = 0$

Option: HART Module Connector, only for temporary connection of an intrinsic safe HART Field Communicator

$P_o \leq 770 \text{ mW}$, $U_o \leq 28 \text{ V}$, $I_o \leq 110 \text{ mA}$, $L_o \leq 10 \mu\text{H}$, $C_o \leq 1 \text{ nF}$

$P_i \leq 5 \text{ mW}$, $U_i \leq 5 \text{ V}$, $I_i \leq 1 \text{ mA}$, $L_i = 0$, $C_i = 0$

EC-Type Examination Certificate: BVS 10 ATEX E009 X

Quality Assurance Notification: 0158

Year of Manufacture: see Label

Serial Nr.: see Label

Special Conditions for Safe Use

- It is not allowed to open the key pad cover for use in areas where Category 1G, Group IIC is required.
- The device shall only be used in areas known to have a low risk of mechanical impact if installed in areas where Category 2D is required.

EMC Conformance according to the Directive 2004 / 108 / EC

EN 50270:2006 Type 2, EN 61000-6-3:2007

7.2 Marking and Certificates according to IECEx

PrimaX P

Manufacturer: MSA AUER GmbH
Thiemannstraße 1
D-12059 Berlin

Product: **PrimaX P**

Type of protection: IEC 60079-0:2007, IEC 60079-1:2007,
IEC 60079-11:2006, IEC 60079-31:2009

Measuring function for explosion protection: no
Gas: see manual

Marking: Prima X P



Ex d [ia] IIC T4 Gb
Ex t [ia] IIIC T130°C Db
-40°C ≤ Ta ≤ +70°C

$P_i \leq 770 \text{ mW}$, $U_i \leq 28 \text{ V}$, $I_i \leq 110 \text{ mA}$, $L_i = 0$, $C_i = 0$

Option: HART Module Connector, only for temporary connection of
an intrinsic safe HART Field Communicator
 $P_o \leq 200 \text{ mW}$, $U_o \leq 2,7 \text{ V}$, $I_o \leq 140 \text{ mA}$, $L_o \leq 10 \mu\text{H}$, $C_o \leq 1 \text{ nF}$
 $P_i \leq 5 \text{ mW}$, $U_i \leq 5 \text{ V}$, $I_i \leq 1 \text{ mA}$, $L_i = 0$, $C_i = 0$

IEC-Type Examination Certificate: IECEx BVS 10.0043 X

Quality Assurance Notification: 0158

Year of Manufacture: see Label

Serial Nr.: see Label

Special conditions for safe use:

- Do not open the instrument when energised.
- For dust applications the installation conditions according to EN 61241-14 have to be considered.
- Intensive electrostatic charging processes on the instrument label have to be prevented.
- Maintenance or repairment according to the type of protection “d” is only allowed by the manufacturer.
- Cable gland: M25 x 1,5 ;Torque 8 -12 Nm; only ATEX certified versions for gas and dust shall be used.
- NPT ¾”- 14; fixture with 2 layer PTFE sealing tape or according to the instructions of the NPT supplier; when removed, new PTFE sealing has to be used after reinstalling; only ATEX certified versions for gas and dust shall be used.

PrimaX I

Manufacturer: MSA AUER GmbH
Thiemannstraße 1
D-12059 Berlin

Product: **PrimaX I**

Type of protection: IEC 60079-0:2007, IEC 60079-11:2006,
IEC 60079-26:2006, IEC 61241-11:2005

Measuring function for explosion protection: no

Gas: see manual

Marking: Prima X I



Ex ia IIC T4 Ga
Ex ia IIIC T130°C Db
-40°C ≤ Ta ≤ +70°C

$P_i \leq 770 \text{ mW}$, $U_i \leq 28 \text{ V}$, $I_i \leq 110 \text{ mA}$, $L_i = 0$, $C_i = 0$

Option: HART Module Connector, only for temporary connection of
an intrinsic safe HART Field Communicator
 $P_o \leq 770 \text{ mW}$, $U_o \leq 28 \text{ V}$, $I_o \leq 110 \text{ mA}$, $L_o \leq 10 \mu\text{H}$, $C_o \leq 1 \text{ nF}$
 $P_i \leq 5 \text{ mW}$, $U_i \leq 5 \text{ V}$, $I_i \leq 1 \text{ mA}$, $L_i = 0$, $C_i = 0$

IEC-Type Examination Certificate: IECEx BVS 10. 0043 X

Quality Assurance Notification: 0158

Year of Manufacture: see Label

Serial Nr.: see Label

Special conditions for safe use:

- It is not allowed to open the key pad cover by operations at Category II Ga and Group IIC.
- The device shall only be used in areas known to have a low risk of mechanical impact if installed in Group II Db.

7.3 Special conditions for the safe use according to ATEX and SIL applications

Safety relevant parameters for the Gas Transmitters

Type	B
Structure	1oo1 or 1oo2
HFT	0 or 1
PFD, PFH, SFF	see table
λ_{tot} , λ_D , λ_{DU} , λ_{DD}	see table
MTTR	72 h
T1	16 weeks [Proof-Test-Interval]

Possible structures and acquirable SILs

The following table shows, which structure has to be selected, to fulfil the requirements of a special SIL.

LDM = Low Demand Mode

HDM = High Demand or Continuous Mode

	SIL1		SIL2		SIL3	
	LDM	HDM	LDM	HDM	LDM	HDM
Structure 1oo1	X	X	X			
Structure 1oo2	X	X	X	X	X	X

Depending on the selected configuration and the sensor version, the following safety-relevant parameters have to be considered while implementing the safety loop:

General conditions for the safe use

- The application advice and the limitations of the manual have to be considered. For calibration and maintenance, the regional and national regulations have to be considered.
- A defect transmitter has to be repaired within 72 hours.
- The HART® interface is not allowed to be used for the transmission of safety related data.
- The alarm conditions of the transmitter must be periodically checked together with the typical gas calibration checks.
- The relays must be energised under normal conditions.

- The relay contacts must be protected with a fuse rated 0.6 of the nominal specified relay contact current.
- The failure relay contacts must be safety related processed for warning purposes when the 4 to 20 mA link is not use for the alarm condition.
- The tests of the 4-20 mA - output signal and alarm conditions and the test of the alarm and fault relays, LEDs and display have to be done during every calibration phase.
- The connected controller has to monitor the 4-20 mA signal current for values below 4 mA and above 20 mA.
- For the correct use of the combustible sensor a minimum oxygen concentration of 10 Vol% is necessary.
- The presence of catalytic poisons has to be avoided for the combustible sensor.
- A functional check/calibration check has to be done for the complete system.
- A visual check has to be done monthly.
- A system check has to be done every year.
- For the test gas, the gas has to be used which is defined for the measurement. The concentration of the test gas has to be in the middle of the measure range.
- For zero gas, synthetic air has to be used.
- An adjustment has to be done under the following conditions:
 - difference at zero > +/- 5 % UEG
 - difference at sensitivity > +/- 20 % of the rated value
- If the calibration is inside of the valid tolerance, the calibration interval can be doubled.
- The maximum of the calibration interval is 16 weeks.
- The sensor has to be replaced if the sensor sensitivity during the operation is reduced to less than 50 % of the initial sensitivity.
- After exposure of gas above the measuring range, the sensor has to be immediately calibrated/adjusted, independent of the calibration interval. In the case of an adjustment the sensitivity of the sensor has to be rechecked again after 24 hours.
- If the appearance of catalytic poisons for the combustible sensor can not be avoided, the calibration interval has to be considerably reduced.

Special conditions for SIL 2

- The use of the sensors in a High Demand or Continuous Mode is allowed only in a 1002 - structure.
- The outputs of the sensors [4-20 mA - loops and relay contacts] must to be monitored regarding deviations.

Special conditions for SIL 3

- The use of the sensors is allowed only in a 1002 - structure.
- The outputs of the sensors [4-20 mA - loops and relay contacts] must to be monitored regarding deviations.

7.4 Safety Relevant Parameters [40°C]t

Application with Relay

	λ_{total}	λ_S	λ_D	λ_{DU}	λ_{DD}	SFF	DC	PFD _{1k}	PFD _{1k}	PFD _{2k}	PFD _{2k}	PFD _{2k}	PFD _{2k}	PFD _{2k}	PFD _{2k}
	fit	fit	fit	fit	fit	%	%	% of SIL 2		% of SIL 3 1/h		% of SIL 1 1/h		% of SIL 3	
Ammonia [NH ₃]	3737	2469	1269	415	854	88.9	67.3	7.9E-04	5.6	1.2E-05	1.2	4.2E-07	4.2	8.7E-09	8.7
Carbon Monoxide [CO]	3187	2194	994	255	739	92.0	74.4	3.4E-04	3.4	7.0E-06	0.7	2.5E-07	2.5	5.3E-09	5.3
Chlorine [Cl ₂]	4332	2766	1566	589	978	86.4	62.4	7.8E-04	7.9	1.7E-05	1.7	5.9E-07	5.9	1.3E-08	12.7
Combustible	6666	3933	2733	1066	1667	84.0	61.0	1.4E-03	14.3	3.1E-05	3.1	1.1E-06	10.7	2.4E-08	24.2
Hydrogen [H ₂]	3737	2469	1269	415	854	88.9	67.3	7.8E-04	5.6	1.2E-05	1.2	4.2E-07	4.2	8.7E-09	8.7
Hydrogen Chloride [HCl]	4297	2749	1549	578	970	86.5	62.7	1.0E-04	7.8	1.6E-05	1.6	5.8E-07	5.8	1.2E-08	12.4
Hydrogen Cyanide [HCN]	3995	2598	1398	490	907	87.7	64.9	7.5E-04	6.6	1.4E-05	1.6	5.6E-07	5.6	1.2E-08	12.0
Hydrogen Sulphide [H ₂ S]	3187	2194	994	255	739	92.0	74.4	5.6E-04	3.4	7.0E-06	0.7	2.5E-07	2.5	5.3E-09	5.3
Nitrogen Dioxide [NO ₂]	4237	2718	1518	561	958	86.8	63.1	7.5E-04	7.5	1.6E-05	1.6	5.6E-07	5.6	1.2E-08	12.0
Nitrogen Oxide [NO]	4877	3039	1839	748	1091	84.7	59.3	1.0E-03	10.0	2.1E-05	2.1	7.5E-07	7.5	1.6E-08	16.4
Oxygen [O ₂]	6044	3622	2422	655	1767	89.2	73.0	8.8E-04	8.8	1.9E-05	1.9	6.5E-07	6.5	1.4E-08	14.2
Sulphur Dioxide [SO ₂]	4297	2749	1549	578	970	86.5	62.7	5.6E-04	7.8	1.6E-05	1.6	5.8E-07	5.8	1.2E-08	12.4

Application with 4-20 mA Current Output

	λ_{total}	λ_S	λ_D	λ_{DU}	λ_{DD}	SFF	DC	PFD _{1k}	PFD _{1k}	PFD _{2k}	PFD _{2k}	PFD _{2k}	PFD _{2k}	PFD _{2k}	PFD _{2k}	
	fit	fit	fit	fit	fit	%	%	% of SIL 2		% of SIL 3		1/h	% of SIL 1		1/h	% of SIL 3
Ammonia [NH ₃]	1734	867	867	363	504	79.1	58.1	4.9E-04	4.9	1.0E-05	1.0	3.6E-07	3.6	7.6E-09	7.6	
Carbon Monoxide [CO]	1183	592	592	202	389	82.9	65.8	2.7E-04	2.7	5.5E-06	0.6	2.0E-07	2.0	4.2E-09	4.2	
Chlorine [Cl ₂]	2328	1164	1164	536	628	77.0	53.9	7.2E-04	7.2	1.5E-05	1.5	5.4E-07	5.4	1.1E-08	11.5	
Combustible	4662	2331	2331	1013	1318	78.3	56.5	1.4E-03	13.6	3.0E-05	3.0	1.0E-06	10.1	2.3E-08	22.9	
Hydrogen [H ₂]	1734	1437	1437	363	504	79.1	58.1	4.9E-04	4.9	1.0E-05	1.0	3.6E-07	3.6	7.6E-09	7.6	
Hydrogen Chloride [HCl]	2294	1117	1117	526	621	77.1	54.1	7.1E-04	7.1	1.5E-05	1.5	5.3E-07	5.3	1.1E-08	11.2	
Hydrogen Cyanide [HCN]	1992	867	867	438	558	78.0	56.0	5.9E-04	5.9	1.2E-05	1.2	4.4E-07	4.4	9.3E-09	9.3	
Hydrogen Sulphide [H ₂ S]	1183	592	592	202	389	82.9	65.8	2.7E-04	2.7	5.5E-06	0.6	2.0E-07	2.0	4.2E-09	4.2	
Nitrogen Dioxide [NO ₂]	2233	1147	1147	509	608	77.2	54.5	6.8E-04	6.8	1.4E-05	1.4	5.1E-07	5.1	1.1E-08	10.8	
Nitrogen Oxide [NO]	2874	1437	1437	695	741	75.8	51.6	9.3E-03	9.3	2.0E-05	2.0	7.0E-07	7.0	1.5E-08	15.2	
Oxygen [O ₂]	4040	2020	2020	602	1418	85.1	70.2	8.1E-04	8.1	1.7E-05	1.7	6.0E-07	6.0	1.3E-08	13.0	
Sulphur Dioxide [SO ₂]	2294	1147	1147	526	621	77.1	54.1	7.1E-04	7.1	1.5E-05	1.5	5.3E-07	5.3	1.1E-08	11.2	

8 Accessories

For part numbers → chapter 8.7.

8.1 Calibration Cap

Using calibration cap allows span gas calibration procedure to be accurate in windy environmental conditions.

The calibration cap is pushed on to the front of the sensor and is sealed by an O- ring. The surface area $S < 20 \text{ cm}^2$.



Fig. 13 Calibration cap



Warning!

The calibrating cap must be removed after completing the calibration!

The gas is supplied via either of the gas inlets by means of suitable flexible tube.

8.2 Sensor Gard



Fig. 14 Sensor gard

The sensor gard should be fitted at all times except when using the flow through adapter or duct mount kit.

Ambient weather condition can affect the gas mixture inside of the sensor gard. Use sensor gard for functional test only. Calibration cap is recommended for sensor calibration.



Using the sensor guard will extend the response time, depending on the gas flow rate.

Gas flow rate: 1,0 l/min

8.3 Remote Calibration



Fig. 15 PrimaX with CalGard

The CalGard stainless steel remote calibration adaptor provides reliable operation of remotely installed gas detectors working under harsh environmental conditions. Additionally, the CalGard allows remote verification ("bump test") or instrument calibration of gases listed later in this section and oxygen via a hose connection in the presence of wind speeds up to 6 m/s.

In normal measurement operation, the ambient air passes through the air vents into the remote calibrator directly to the sensor (diffusion operation). During a bump test or instrument calibration, the test gas is supplied to the sensor via the hose connection at the bottom of the CalGard. An integrated mechanism prevents the dilution and dispersion of test gas otherwise caused by external influences, such as wind. This allows a fast response from the sensor to the applied test gas.

Once calibration is complete, the air inlet reopens to allow the monitoring of ambient air for gas without the need for further user intervention.

Installation

For correct operation, PrimaX and CalGard must be used in a vertical position (hose connection pointing downwards). The CalGard remote calibration adaptor can be attached to the sensor by screwing on the thread of the detector.



The tube connector is adapted for tubes with an inner diameter of 5 mm.

In general the hose should be as short as possible in order to:

- Minimise the gas volume needed to flush the tube
- Reduce external influences (e.g. temperature shift, pressure, etc.)
- Minimise the lead time

Hose material should be adapted to the applied test gas, have no absorptive or adsorptive properties and should be made from inert material such as teflon or polyethylene.

When using the CalGard in the hazardous area, a conductive hose must be used.

The free end of the test gas tube must be closed if no test gas is applied. This is to prevent gas or air passing through the tube to the sensor, distorting the measurement or in the reverse pressure conditions, the ambient atmosphere escapes from the sensor at the free end of the tube.

To ensure proper function the CalGard remote calibration adaptor must be kept dry and free of any contaminants, e.g. dust particles. Regular visual checks are recommended. Any contaminants must be removed by blowing them off with clean, oil-free compressed air or with a dry brush. Ensure that the air entrances are kept free from any coating, e.g. paint, grease or similar.

Operation

Calibration procedure can be carried out as described in chapter 4.3 of this manual. To compensate for possible deviations during measurement of flammable gases a calibration factor of 1.05 has to be applied.

Example: Calibration for methane.

Apply 40 %LEL methane and adjust to $1.05 \times 40 = 42$ %LEL

When using the CalGard for a remote calibration, the response time of the system increases depending on the length of the test gas tubes used. If the calibration is done automatically, set the calibration setup (menu: M04) with sufficiently long countdown times for zero gas and calibration gas.

Example: When using a 10 metre long tube with an internal diameter of 5 mm and applying a gas flow of 1 litre/min, the test gas takes a minimum of 20 sec to reach the CalGard remote calibration adaptor. For safe flushing of CalGard, an additional 10 seconds has to be added to this calculation.

If the CalGard is being used with a control system (i.e. SUPREMA), please ensure the manual for the controller has been read and understood.

The pressure in the test gas tube increases with rising test gas flow rates. A flow rate of 1500 ml/min results in a pressure up to 600 hPa. This has to be considered if a flow meter is used which is affected by the media pressure.

Material	St. St. 316
Dimensions (in mm)	60 x 122 (diameter x height)
Weight	0.6 kg
Working temperature	-30 °C to +70 °C
Storage temperature	-30 °C to +70 °C
Max. wind speed	up to 6 m/s
Applicable test gases	H ₂ , CH ₄ , C ₃ H ₈ , CO and H ₂ S in air, O ₂ in N ₂ (approval of other gases by MSA on request)
Recommended flow rate	1.0 l / min
Minimum flow rate	0,8 l / min
Maximum flow rate	1.5 l / min

Response times			
	CH ₄	t ₅₀ ≤ 15 s	t ₉₀ ≤ 40 s
	C ₃ H ₈	t ₅₀ ≤ 20 s	t ₉₀ ≤ 55 s
	O ₂	t ₅₀ ≤ 10 s	t ₉₀ ≤ 45 s
	CO	t ₅₀ ≤ 15 s	t ₉₀ ≤ 45 s
	H ₂ S	t ₅₀ ≤ 20 s	t ₉₀ ≤ 60 s

8.4 Flow Through Adapter



Fig. 16 Flow through adapter

The flow through adapter is for use with a pumped sampling system.

Gas inlet/outlet thread: 1/8" NPT
 Gas flow rate: 1.0 l/min



Using the flow through adapter will extend the response time, depending on the gas flow rate.

8.5 Duct Mounting Kit



Fig. 17 Duct mounting kit

Gas monitoring in air ducts can be performed by means of this duct mounting kit. When installing, the direction of flow inside the duct must be towards the baffles.

The sensor can be calibrated via the gas calibration port, provided the duct is free of all gases to which the sensor will respond. If the duct cannot be gas free, the sensor must be removed from the duct during calibration.

The calibration port must be sealed again with the locking cap after calibration has been carried out.

Calibration should only be carried out with the calibration port if the air velocity is < 5 m/s in the air duct.



The performance of the duct mounting kit depends on various parameters and has to be checked before usage. The kit was not part of the compliance test.

8.6 Pipe Mounting Kit

The PrimaX can be mounted vertically by fastening its back plane using two screws and washers. Additionally, a pipe mount kit allowing the PrimaX to be fixed to pipes or poles is available as an accessory.

The kit consists of:

- one universal mounting plate
- one retaining plate for pipes with a diameter of 20 – 30 mm
- one retaining plate for pipes with a diameter of 30 – 50 mm
- two tightening straps for pipes with a diameter of 50 – 150 mm.



Fig. 18 Mounting plate

Fig. 19 Retaining plate

Fig. 20 Tightening straps

NOTE: The Pipe mounting kit not included in the EC-Type Examination Certificate BVS 10 ATEX E 009 X

8.7 Sensor Tag



Fig. 21 Sensor tag

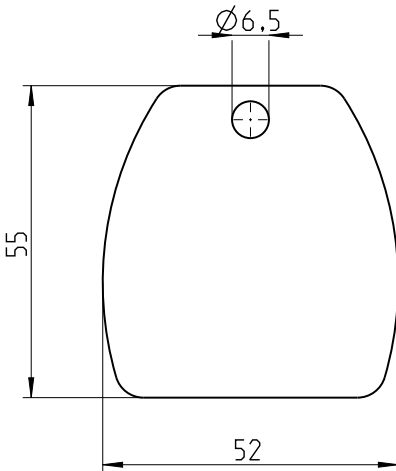


Fig. 22 Measurements sensor tag

The stainless steel label allows to identify and tag the location or installation of the instrument on the site.

8.8 Sunshield



Fig. 23 Sunshield

Stainless steel plate to protect the transmitter from direct sunlight.

8.9 Universal HART Cable



Fig. 24 Universal HART cable

Universal cable that will connect the PrimaX detector to any standard HART handheld [f.e. Emerson 375] using the HART connector.

9 Spare Parts

List of Accessories

Description	Material	Part No.
Sensor Gard	Plastic	10113033
Flow Through Adapter	St.St. 316	10113031
Duct Mounting Kit	St.St. 316	10112790
Pipe Mounting Kit	St.St. 316	10113032
Sensor Tag	St.St. 316	10113034
Sunshield	St.St. 316	10113035
Calibration Cap	Plastic	10112789
CalGard	St.St. 316	10150921
Universal HART cable [1.5 m]		10113036

PrimaX I Replacement Parts

Description	Part No
Bayonet lock plate & screw	10113042
Sensor bayonet & cap	10113048
Mounting plate	10113041
Lid	10113045
Lid screws [set of 4]	10113046
Keyboard cover	10113040
Cable gland M25 x 1.5, 7 – 17 mm	10113039

PrimaX P Replacement Parts

Description	Part No
Bayonet lock plate & screw	10113050
Sensor bayonet and cap	10113058
Mounting plate	10113041
Lid	10113056
Keyboard cover	10113040
Cable gland Ex d II CT4 M25 x 1.5	10113038
Cable gland Ex d II CT4 ¾" NPT	10113037

Gas	Range [optional]	Part No.
Catalytic Sensor Combustible Gases [Only PrimaX P version]	100% LEL	10112716
Ammonia [NH ₃]	100 ppm [50 ppm]	10080225
Ammonia [NH ₃]	1000 ppm [500 ppm]	10112719
Carbon Monoxide [CO]	200 ppm [100 ppm, 500 ppm, 1000 ppm]	711306
Chlorine [Cl ₂]	10 ppm [5 ppm]	10112720
Hydrogen [H ₂]	1000 ppm	10112723
Hydrogen Chloride [HCl]	30 ppm [10 ppm, 20 ppm]	10112721
Hydrogen Cyanide [HCN]	30 ppm [10 ppm, 20 ppm, 50 ppm]	10080220
Hydrogen Sulphide [H ₂ S]	50 ppm [10 ppm, 20 ppm, 100 ppm]	711307
Nitrogen Dioxide [NO ₂]	10 ppm [20 ppm, 100 ppm]	10080224
Nitrogen Oxide [NO]	100 ppm	10112724
Oxygen [O ₂] (recommended)	0–25% vol. [10 vol%]	10112718
Oxygen [O ₂]	0–25% vol. [10 vol%]	10148289
Sulphur Dioxide [SO ₂]	50 ppm [10 ppm, 20 ppm, 100 ppm]	10080223



Electrochemical sensors should only be ordered for immediate replacement. The storage temperature should be in the range of +5° C to +12° C. Disposal of electrochemical sensors has to be carried out professionally.

10 Appendix

10.1 Output States

Display	Alter-nating	LED col-our	State	Signal current	Default
		Green	Normal	4 – 20 mA	
		Yellow [flashing]	Startup	Service current	3 mA
		Yellow [flashing]	Calibration	Service current	3 mA
CAL	X	Yellow	Calibration invalid	Service current	3 mA
VCC ▲	X	Yellow	Latched voltage over-range [confirm on device]	Service current	3 mA
LOOP	X	Yellow	Loop not connected [PrimaX P]		
LO ▼	X	Yellow	Underrange [$< -10\%$]	Error current	2 mA
LO ▼	X	Green	Underrange [$< -2\%$] TOX [$< -5\%$] combustible	3.8 - 4 mA	
HI ▲	X	Green	Overrange	20 – 20.5 mA	
E-XX		Yellow	Error	Error current	2 mA
E-XX		Yellow	Safety critical error	Open loop	
				- 0 mA PrimaX P	
				- <2 mA PrimaX I	

Relay versions only				
Display	Alternating	LED colour	State	Signal current
		Red	Alarm	4 - 20 mA
		Red [flashing]	Latched alarm	4 - 20 mA
Catalytic sensor only (Part No.10112716)				
LOC	X	Red	LOC	20.5 mA
LOC	X	Red [flashing]	Latched LOC	20.5 mA

LOC: The PrimaX Gas Monitor has been exposed to a high gas concentration [above the LEL], and the over-range condition still exists.

Latched LOC: The PrimaX Gas Monitor has been exposed to a high gas concentration [above the LEL], and there is a possibility that the over-range condition may still exist.




The output states are displayed alternating to the measuring value [except for ERROR and underrange].

10.2 Calibration Faults

Display	Cause	Troubleshooting
FAIL - 1	Zero not stable	
FAIL - 2	Zero too low	
FAIL - 3	Zero too high	
FAIL - 4	Span not stable	Check zero gas and span gas, see settings [M-03] and flow rate, repeat calibration, otherwise replace sensor
FAIL - 5	Span too low	
FAIL - 6	Span too high	
FAIL - 7	Not enough resolution	
FAIL - 8	Catalytic sensor values out of technical specification	

10.3 Error Codes

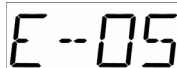

If an error is detected, the error code E, followed by a numeric code and a short description, will be displayed.

In this case the normal operation mode of the device will not respond to gas and the output signal current will be the ERROR value [default 2 mA].

Display	Cause	Troubleshooting
E-01 – E-19, E-50 – E-53	Latched Hardware/Software Error	E-01 – E-29 latched errors, press any key for reset device
E-20 – E-29	Sensor Cell error	
E-30 – E-39, E-54	Unlatched Hardware/Software Error	E-30 – E-49 non-latched errors, self-deactivating
E-40 – E-47	Relay error	
E-48	Device supply too high	
E-49	Device supply too low	

If an error code is displayed, the normal operation of the device is not possible.

If the error code is still shown after a reset, the device could be defective.

The removal of the hydrogen cyanide and chlorine sensors will not trigger the E-28 sensor error message.

For additional support please contact MSA Service.

Sensor errors [E-20 – E-29] could be cleared by checking if the sensor is well connected, or by changing the sensor, or also by resetting the device.

10.4 Timeout

The automatic calibration has a timeout of 4 minutes. The manual calibration has a timeout of 60 minutes [M-01, M-02]. Any test procedure [M-06, M-07, M-13 and the sensor exchange M-05] has a timeout of 15 minutes. Anywhere else in the menu the timeout is 2 minutes, if no button is pressed.

10.5 Mechanical Installation

Dimensions

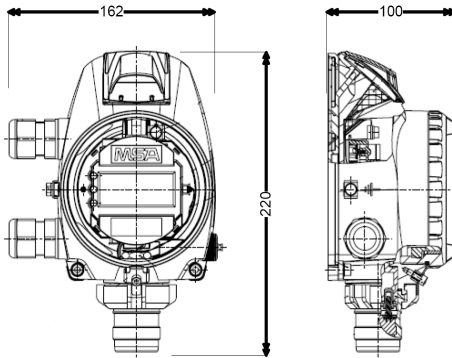


Fig. 25 Outline dimensions Prima X P

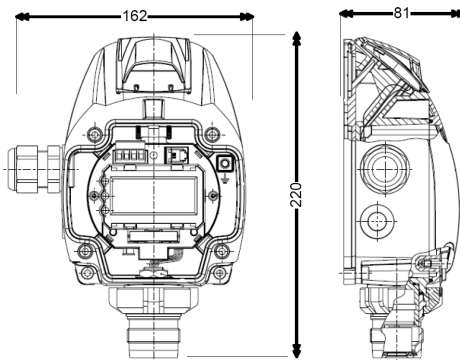


Fig. 26 Outline dimensions Prima X I

Cable gland

- M25 x 1,5; Torque 8 -12 Nm; only ATEX certified versions for gas and dust shall be used.
- NPT ¾" - 14; fixture with 2 layer PTFE sealing tape or according to the instructions of the NPT supplier; when removed, new PTFE sealing has to be used after reinstalling; only ATEX certified versions for gas and dust shall be used.

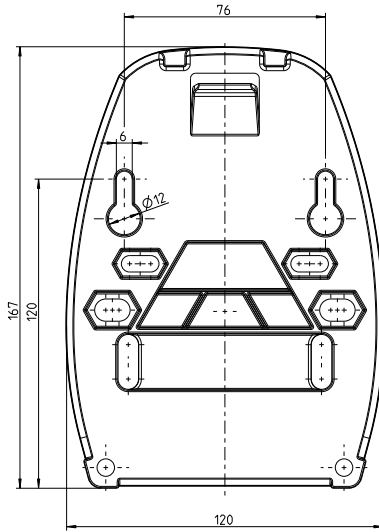


Fig. 27 Installation mounting plate

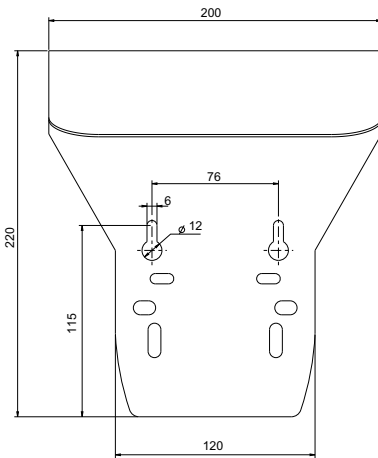


Fig. 28 Dimensions sunshield

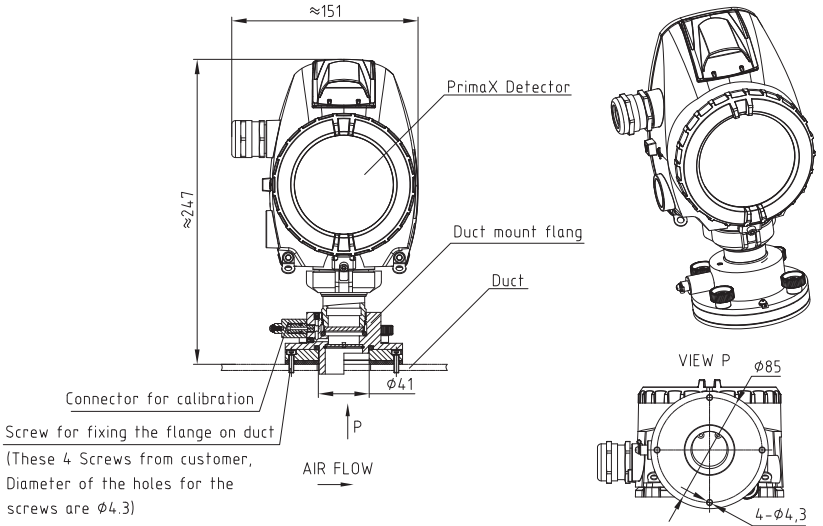


Fig. 29 Duct mounting


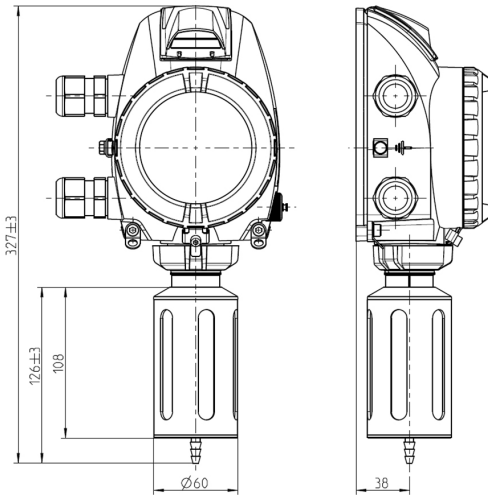






Fig. 30 Dimensions CalGard

10.6 Wiring Diagrams




The HART communications require a minimum of 250 ohms resistance in the 4 – 20 mA loop.




PrimaX I, Ex ia, Intrinsically Safe


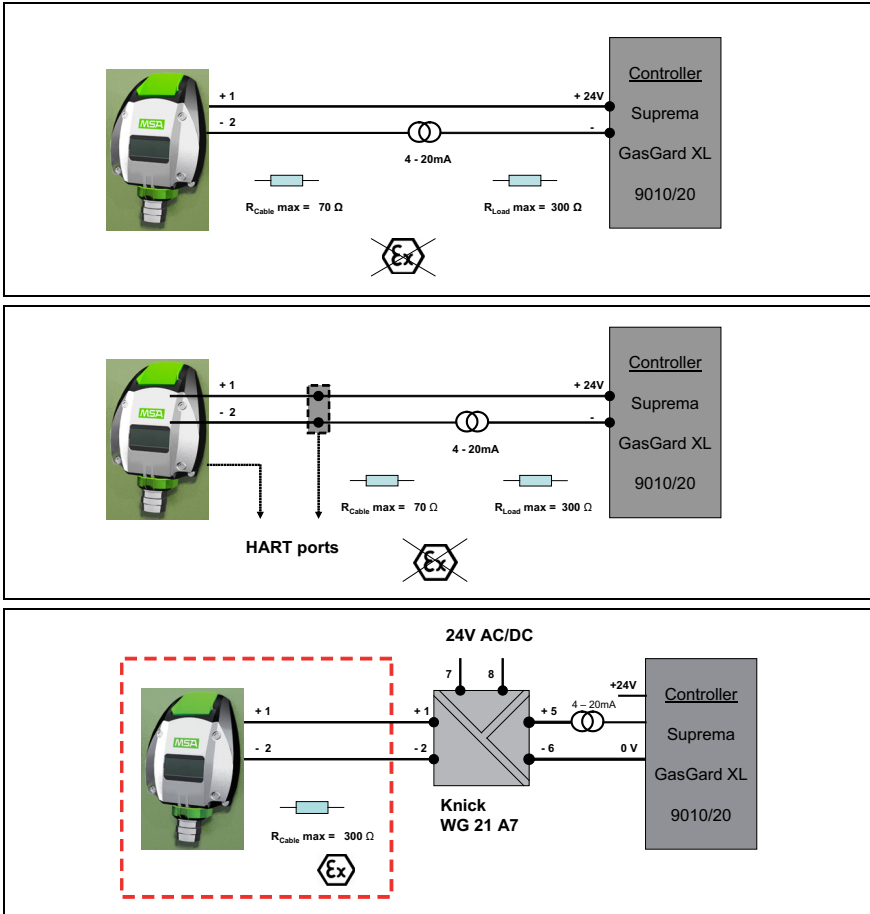


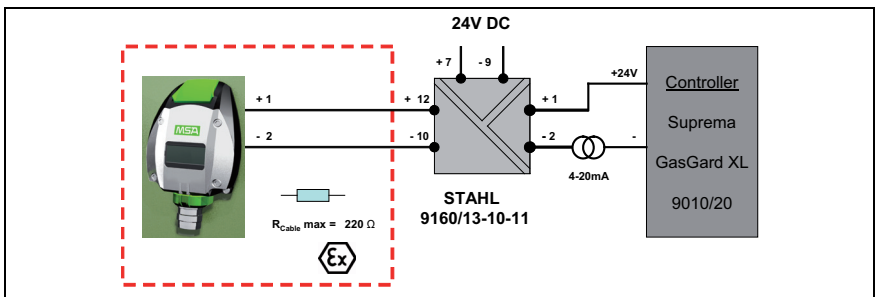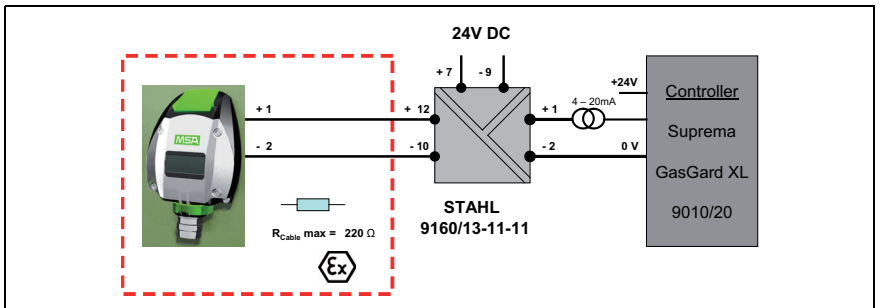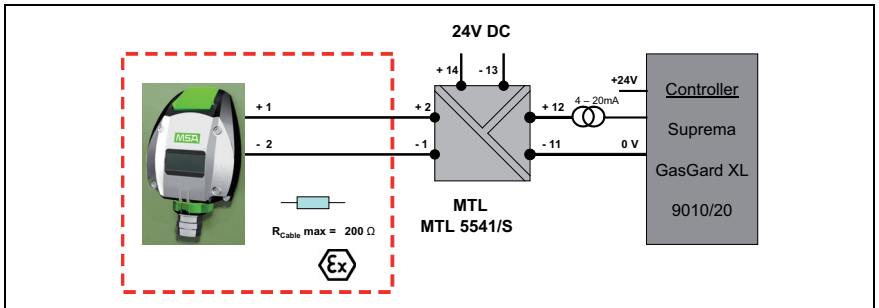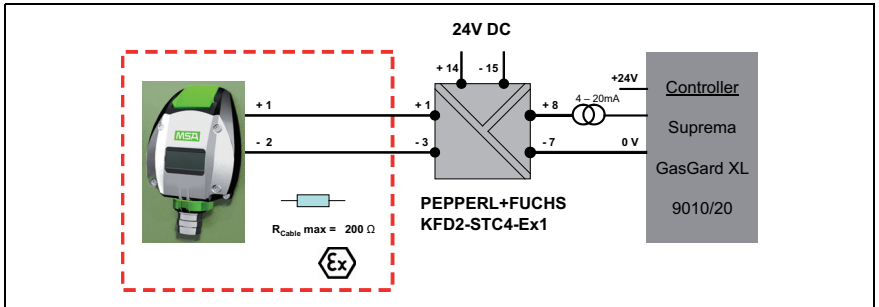

PrimaX P, Ex d, Flameproof

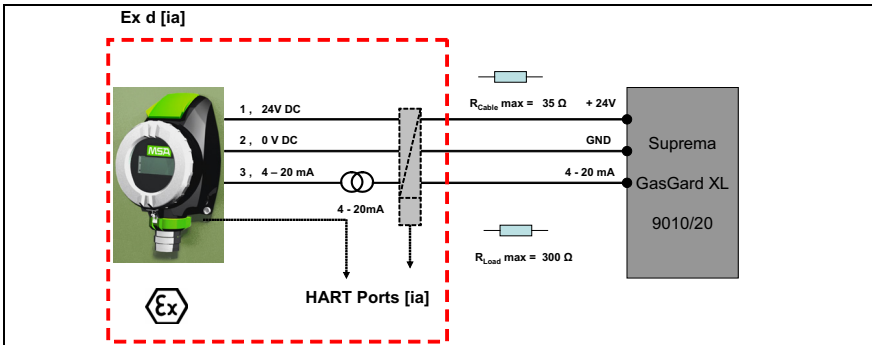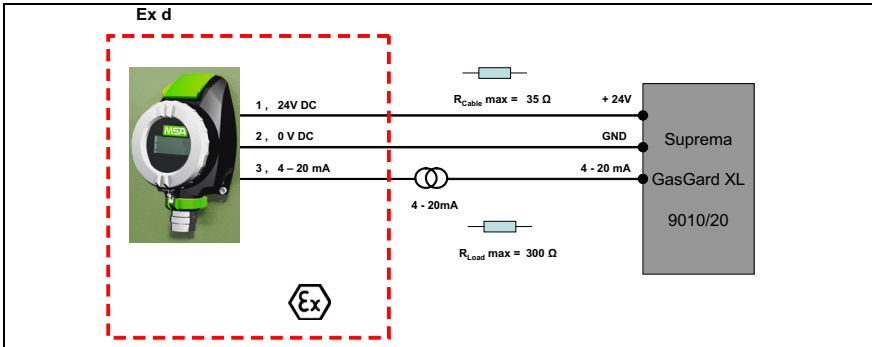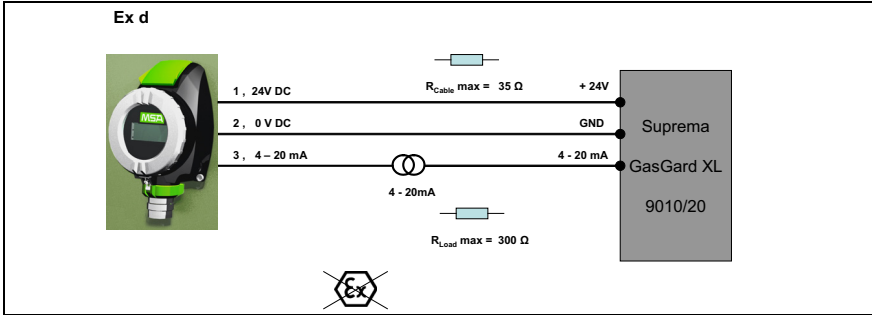

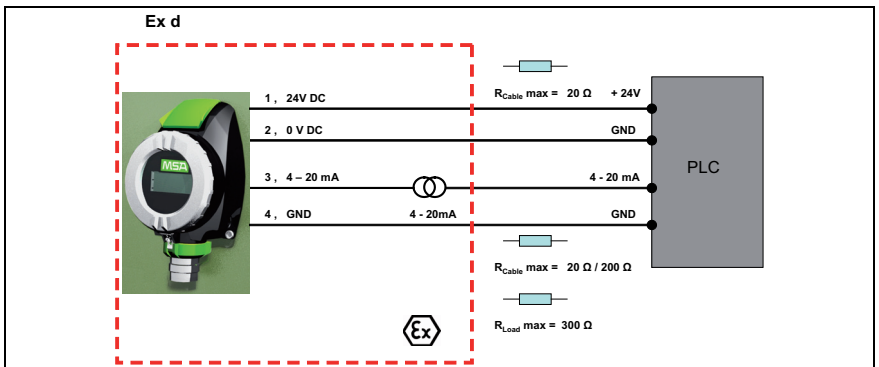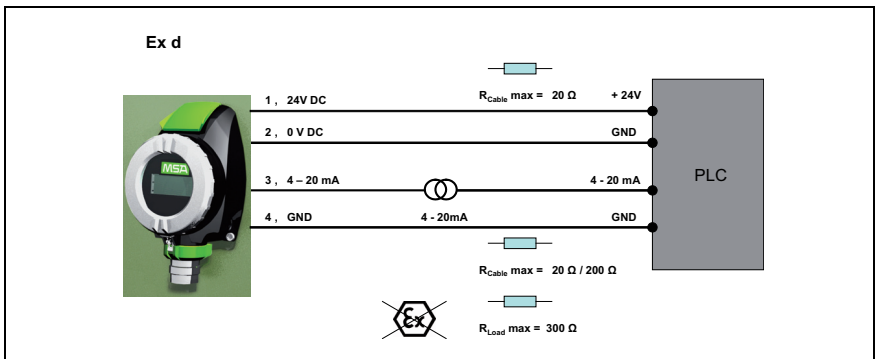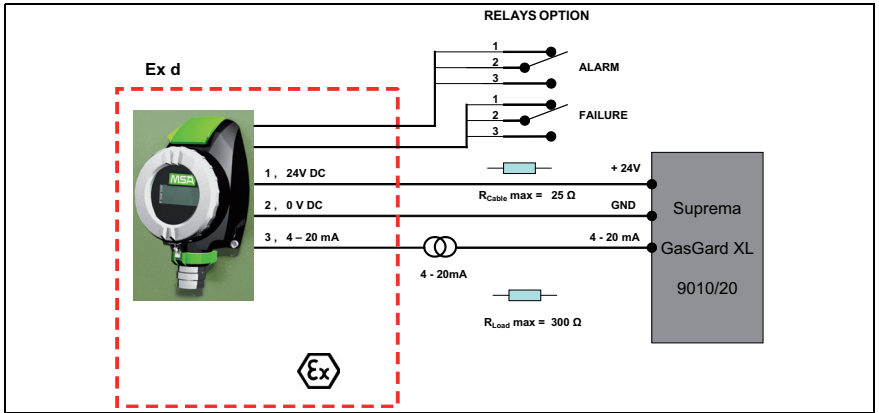

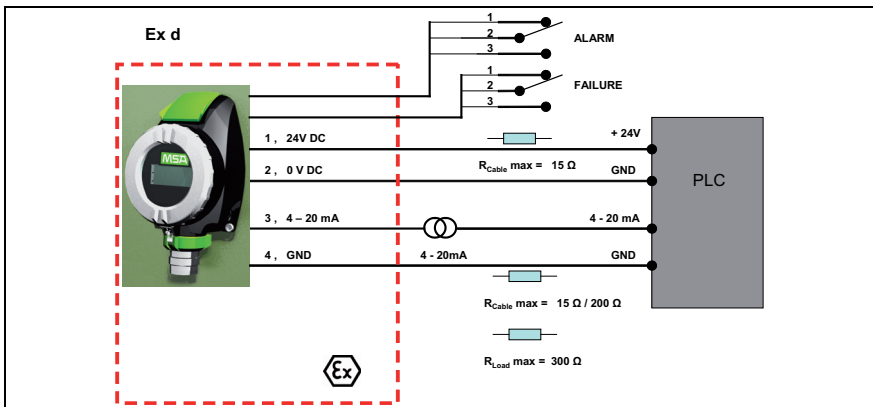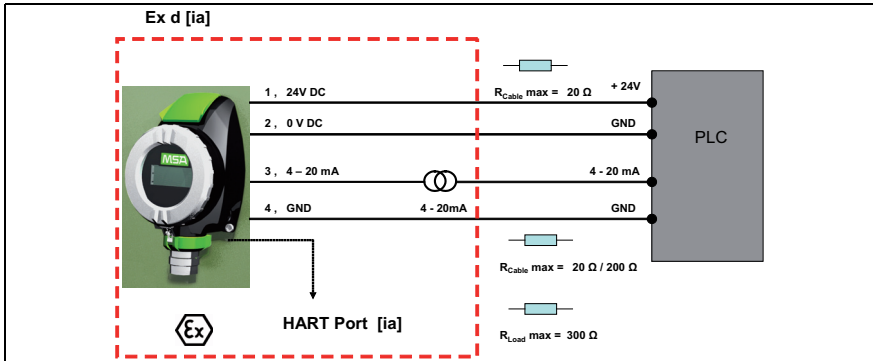

MSA in Europe

[www.MSAafety.com]

Northern Europe

Netherlands

MSA Nederland

Kernweg 20
1627 LH Hoorn
Phone +31 [229] 25 03 03
Fax +31 [229] 21 13 40
info.nl@MSAafety.com

Belgium

MSA Belgium N.V.

Duwijkstraat 17
2500 Lier
Phone +32 [3] 491 91 50
Fax +32 [3] 491 91 51
info.be@MSAafety.com

Great Britain

MSA (Britain) Limited

Lochard House
Linnet Way
Strathclyde Business Park
BELLSHILL ML4 3RA
Scotland
Phone +44 [16 98] 57 33 57
Fax +44 [16 98] 74 01 41
info.gb@MSAafety.com

Sweden

MSA NORDIC

Kopparbergsgatan 29
214 44 Malmö
Phone +46 [40] 699 07 70
Fax +46 [40] 699 07 77
info.se@MSAafety.com

MSA SORDIN

Rörläggarvägen 8
33153 Värnamo
Phone +46 [370] 69 35 50
Fax +46 [370] 69 35 55
info.se@MSAafety.com

Southern Europe

France

MSA GALLET

Zone Industrielle Sud
01400 Châtillon sur
Chalaronne
Phone +33 [474] 55 01 55
Fax +33 [474] 55 47 99
info.fr@MSAafety.com

Italy

MSA Italiana S.p.A.

Via Po 13/17
20089 Rozzano [MI]
Phone +39 [02] 89 217 1
Fax +39 [02] 82 59 228
info.it@MSAafety.com

Spain

MSA Española, S.A.U.

Narcís Monturiol, 7
Pol. Ind. del Sudoeste
08960 Sant-Just Desvern
[Barcelona]
Phone +34 [93] 372 51 62
Fax +34 [93] 372 66 57
info.es@MSAafety.com

Eastern Europe

Poland

MSA Safety Poland Sp. z o.o.

Ul. Wschodnia 5A
05-090 Raszyn k/Warszawy
Phone +48 [22] 711 50 00
Fax +48 [22] 711 50 19
info.pl@MSAafety.com

Czech republic

MSA Safety Czech s.r.o.

Argentinska 38
170 00 Prague 7
Phone +420 241440 537
Fax +420 241440 537
info.cz@MSAafety.com

Hungary

MSA Safety Hungaria

Francia út 10
1143 Budapest
Phone +36 [1] 251 34 88
Fax +36 [1] 251 46 51
info.hu@MSAafety.com

Romania

MSA Safety Romania S.R.L.

Str. Virgil Madgearu, Nr. 5
Ap. 2, Sector 1
014135 Bucuresti
Phone +40 [21] 232 62 45
Fax +40 [21] 232 87 23
info.ro@MSAafety.com

Russia

MSA Safety Russia

Походный проезд д.14.
125373 Москва
Phone +7 [495] 921 1370
Fax +7 [495] 921 1368
info.ru@MSAafety.com

Central Europe

Germany

MSA AUER GmbH

Thiemannstrasse 1
12059 Berlin
Phone +49 [30] 68 86 0
Fax +49 [30] 68 86 15 17
info.de@MSAafety.com

Austria

MSA AUER Austria

Vertriebs GmbH
Modenterstrasse 22
MGC Office 4, Top 601
1030 Wien
Phone +43 [0] 1 / 796 04 96
Fax +43 [0] 1 / 796 04 96 - 20
info.at@MSAafety.com

Switzerland

MSA Schweiz

Eichweg 6
8154 Oberglatt
Phone +41 [43] 255 89 00
Fax +41 [43] 255 99 90
info.ch@MSAafety.com

European

International Sales

[Africa, Asia, Australia, Latin
America, Middle East]

MSA Europe

Thiemannstrasse 1
12059 Berlin
Phone +49 [30] 68 86 0
Fax +49 [30] 68 86 15 58
info.de@MSAafety.com